

ADANA


Installation instructions

Tel (305) 628-2424
Tel (866) 438-2964
Email: info@retractableawnings.com




One Module

200 cm > 450 cm
One module with one motor & 2 rafters

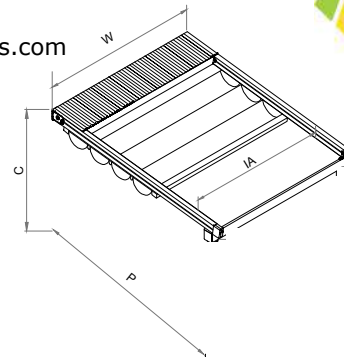


Two Modules

450 cm > 900 cm
Two modules with one motor & 3 rafters

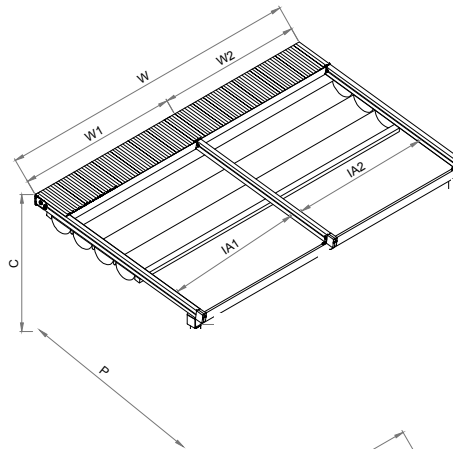

Three Modules

900 cm > 1300 cm
Three modules with one motor & 4 rafters

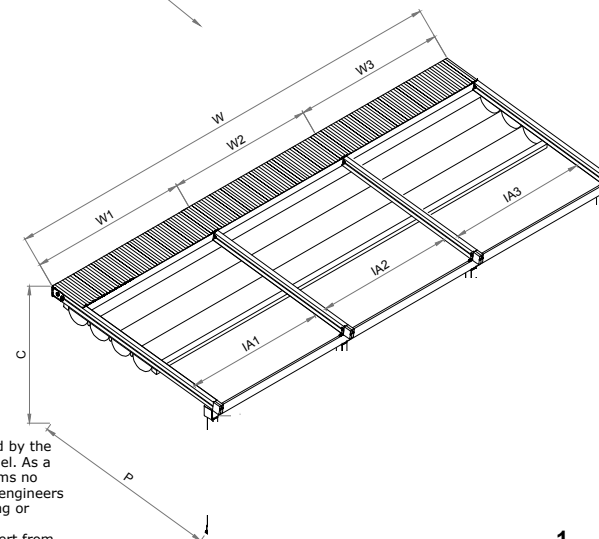


All information contained in this document was provided by the manufacturer of the components for this particular model. As a fabricator/distributor, Retractableawnings.com Inc. claims no liability with respect to these documents as we are not engineers and did not complete any of the information, engineering or calculations in this document.
All measurements in this document are metric. To convert from metric (meters, centimeters and millimeters) to imperial (feet and inches) visit this website:
http://www.onlineconversion.com/length_common.htm

STEP 1


Install wall brackets using suitable fixings for site requirements. Ensure all wall brackets are same level with each other and correct width apart to match the conveyor rafters on your system.

Note : The tolerance value for "W1,W2,W3" is (+ 13.00 mm , -13.00 mm)

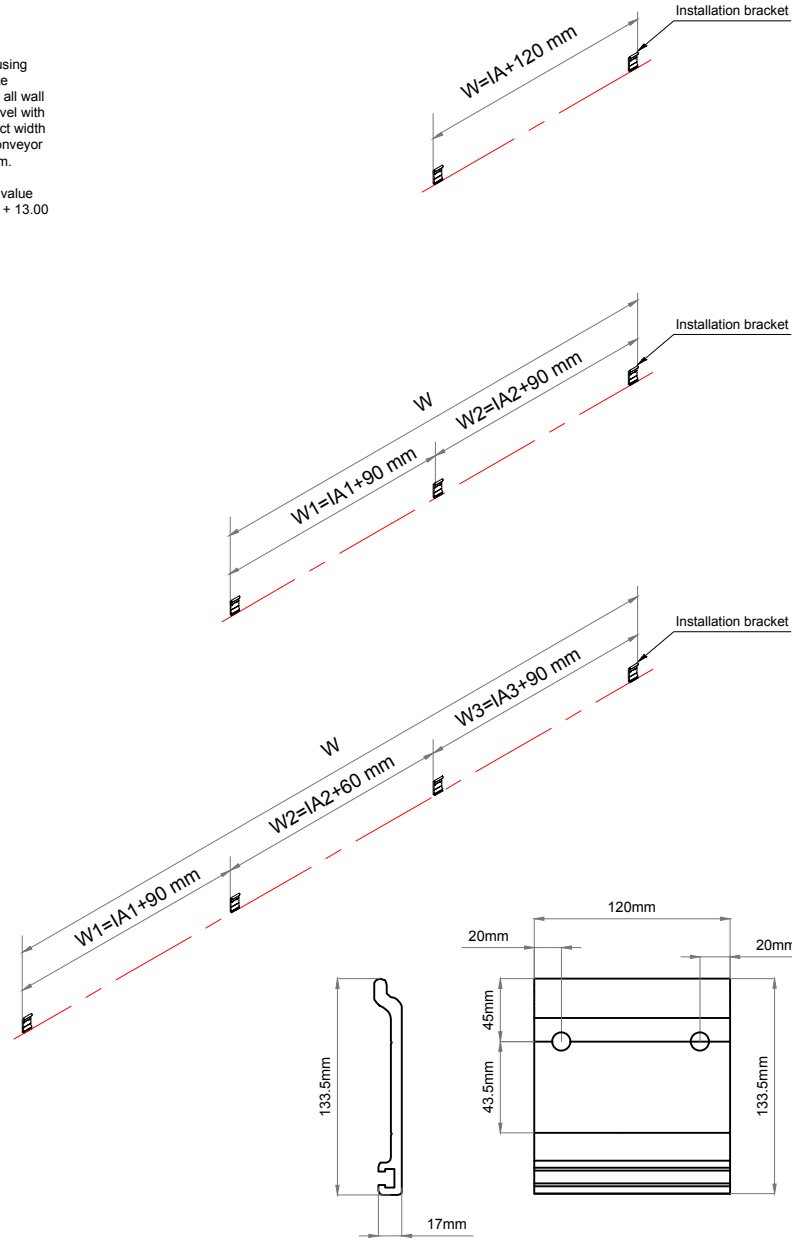


Installation Bracket

IMPORTANT: Use the correct fastener type and size depending on the substrate being attached to

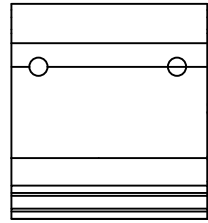


Sign the holes

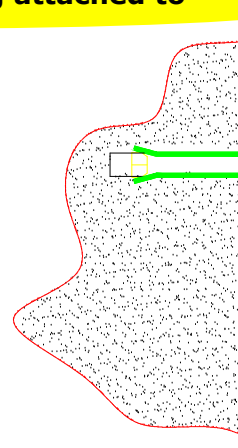

Extract the M12 x 100 steel bolts




Drill the holes by \varnothing 17 depth 100 mm

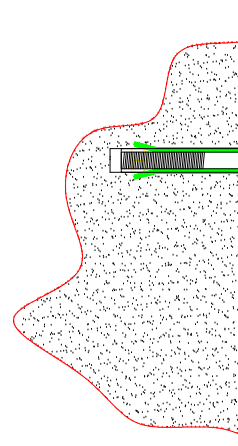

Tighten the steel bolts with installation brackets





Drill the holes by \varnothing 17 depth 100 mm

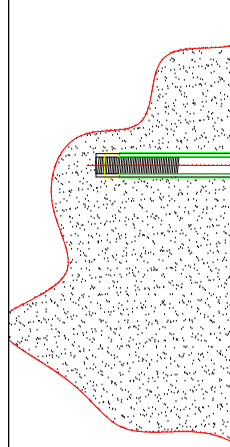



Tighten the M12 x 100 steel bolts clockwise direction by \varnothing 19 wrench

STEP II


Establishment of front
columns & front rafter bar
(gutter)

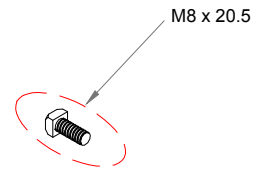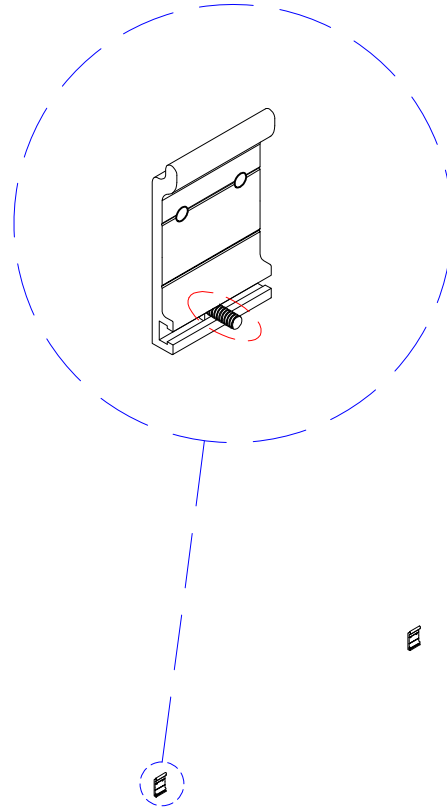

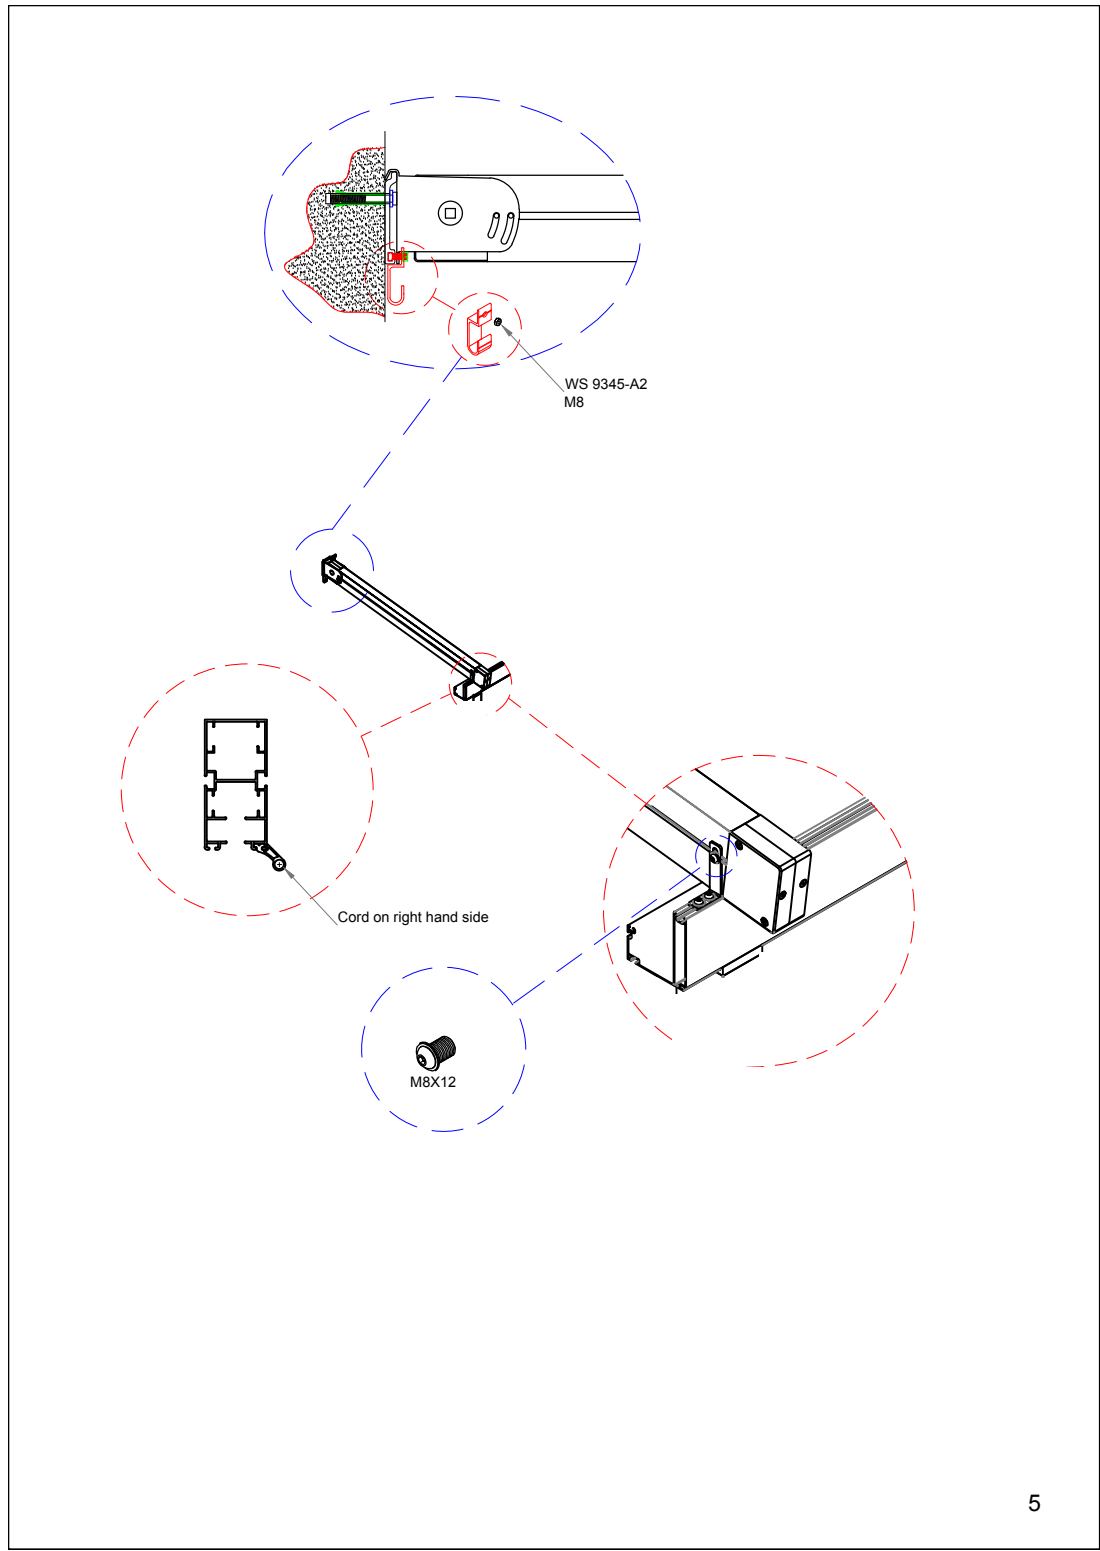


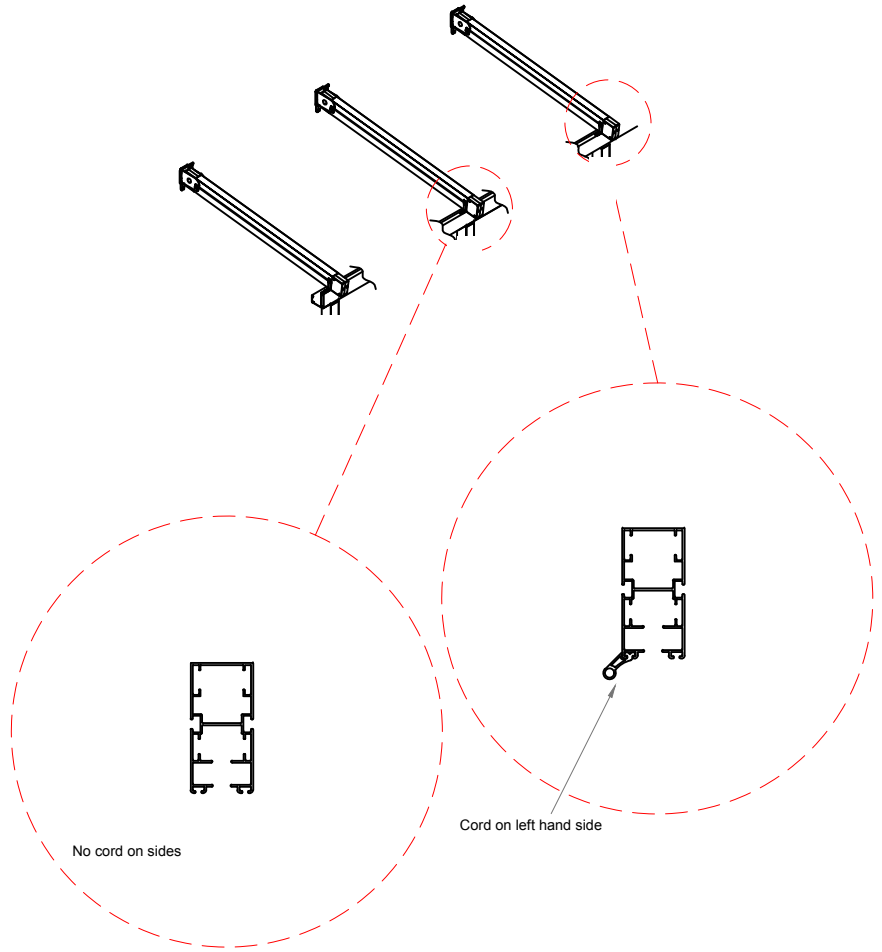


STEP IV
Installation of motorbox
and support profiles

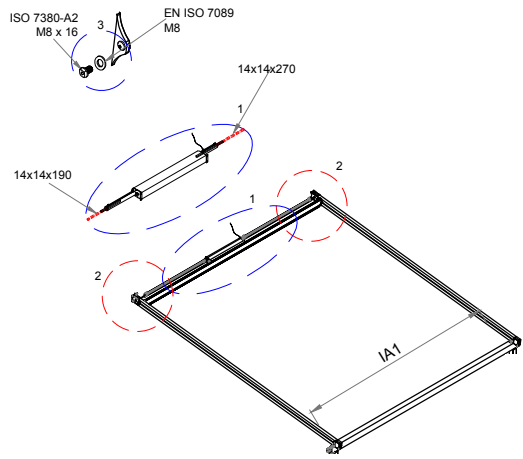


STEP V

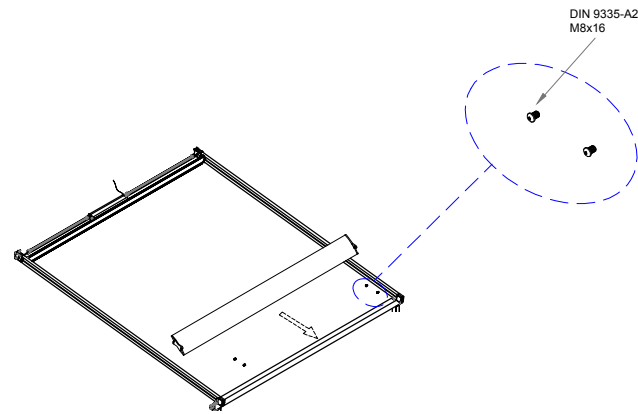


STEP VI
Setting the rectangularity

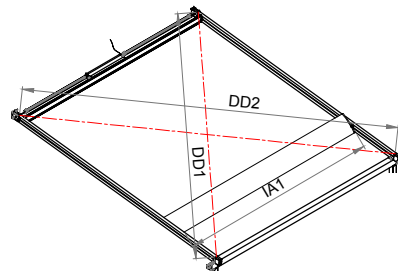

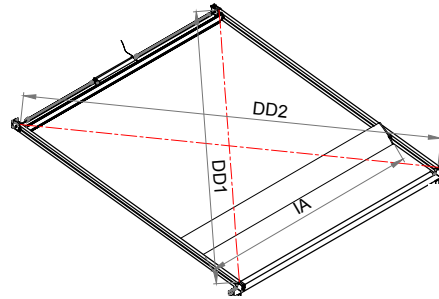


Possibility1

DD1=DD2 ⇒ OK

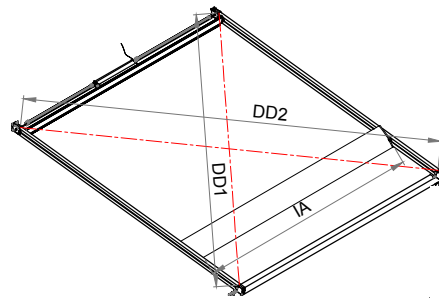

Possibility1

DD1>DD2 ⇒ Move front side
to right hand side
until DD1=DD2




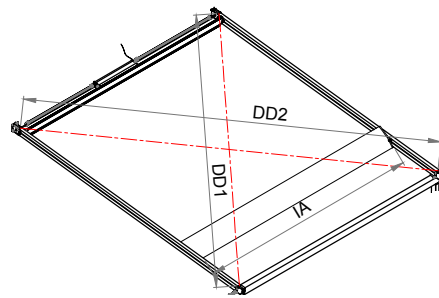


Possibility1



DD1<DD2 ⇒ Move front side
to left hand side
until DD1=DD2

STEP VII

Installation of square pins
and transmission bar

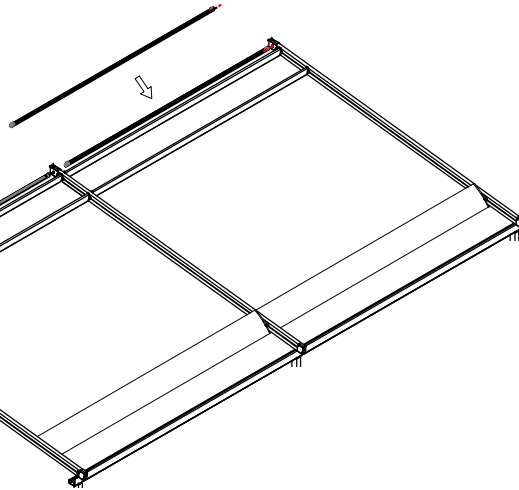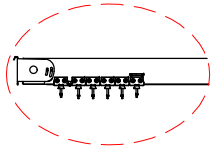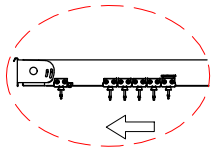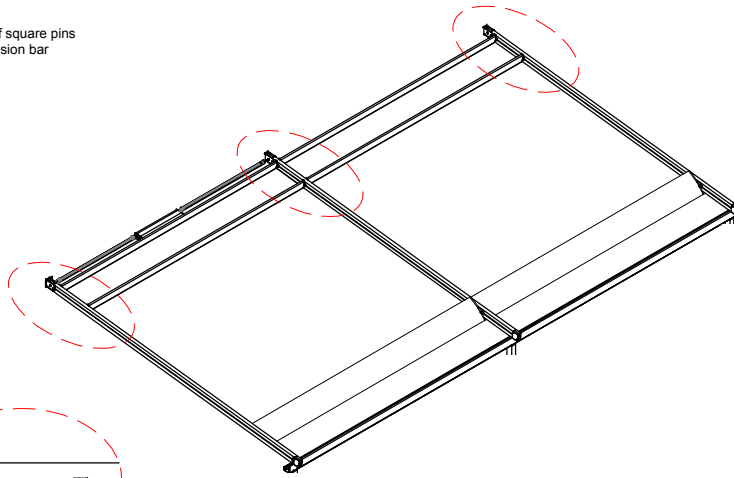




Drive the square pins to the directions mentioned below on details A,B,C.

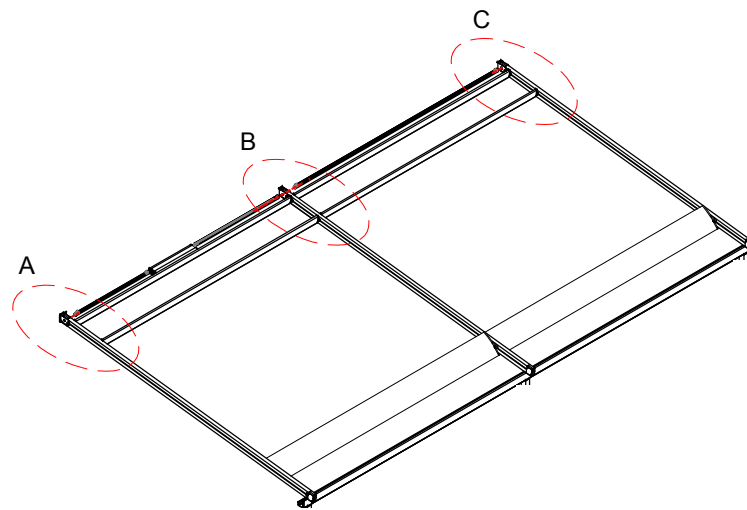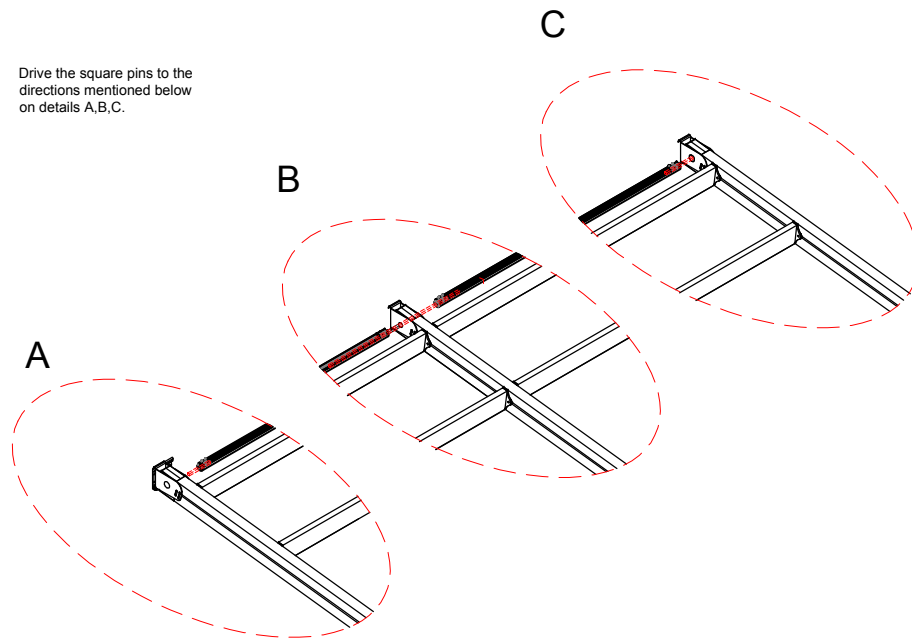


STEP VIII

Installation of fabric


Take care to match the fabric front right position (which writes on the package of fabric) and structure front right position to install the fabric on the system and start the installation from the front sliders.

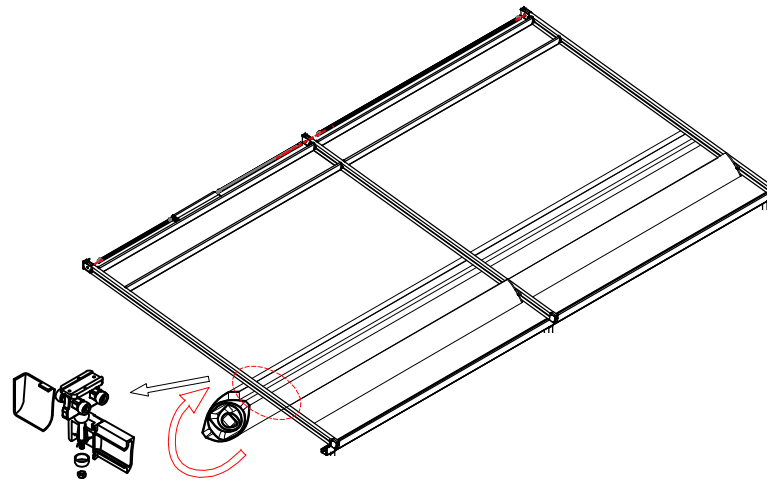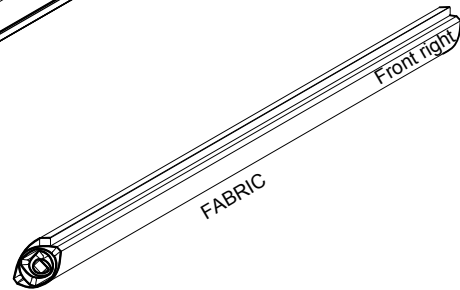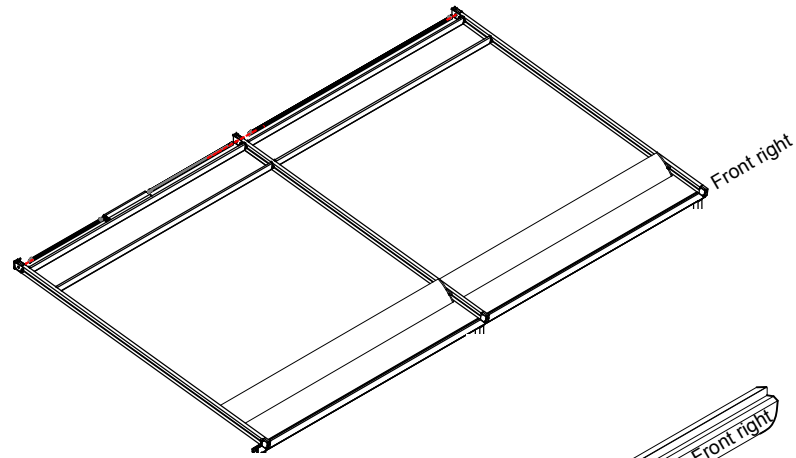

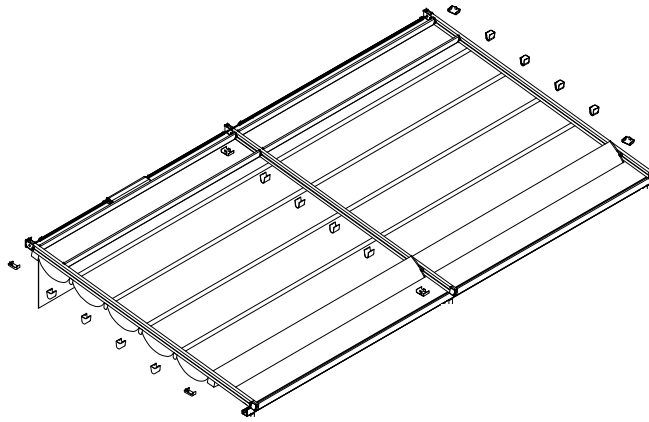



STEP IX

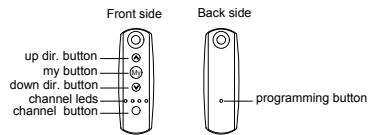
Programming RTS Somfy motor




Step1:
Connect the motorbox to 220 AC power
-Blue : Nofr
-Brown:Phase
-Green-Yellow:Ground


Step2:
 Check the channel for programming motor.Pres the channel button to select the channel 1 , make the channel 1 led light flashing.


Step3:
 Press the up and down button at same instance motor will give a click.(this means motor and remote control unit is introduced to each other.


Step4:
 Press the up button to check the direction of movement.If the fabric moves to up direction go on to step 6, if no go on to step 5.


Step5:
 Press the My button until the motorbox gives a click.The direction is reversed


Step6:
 Move the fabric to back limit position that the fabric is totally gathered under the front top cover support profile.


Step7:
 Press the My button & Down Dir. Button at the same instance for once the fabric will start to move down direction.And stop the movement with My button approx. 5 cm before the front en limit.

Step8:
 Press the down dir. button will small time intervals until the fabric is fully tensioned.

Step9:
 Press the My button & Up Dir. Button at the same instance for once the fabric will start to move up direction.And will stop itself at back limit position.

Step10:
 Stay pressing the My button until the motor will give click movement.

Step11:
 Press the programming button once. The programming is finished.

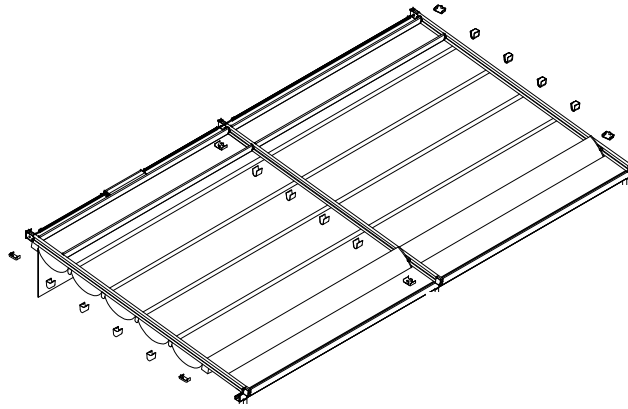

STEP X


Programming the Standart Ligthing System (On / Off)

Optional

⚠ FATAL ERROR FOR LEDS:DO NOT CONNECT LEDS DIRECTLY WITHOUT LPC DRIVERS.

Step1:

CENTRALIS LIGHT RECEIVER RTS

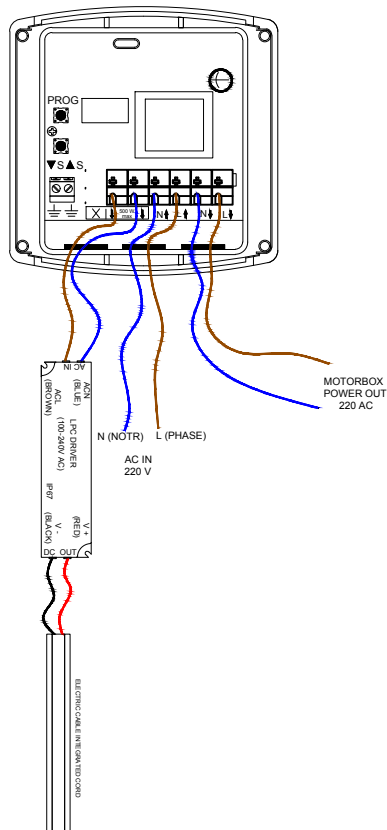

Step2:



Check the channel for programming lights. Pres the channel button to select the channel 2 , make the channel 2 led light flashing.



Step3:

Press once to PROG. button which is inside the centralis light receiver unit.


Step4:



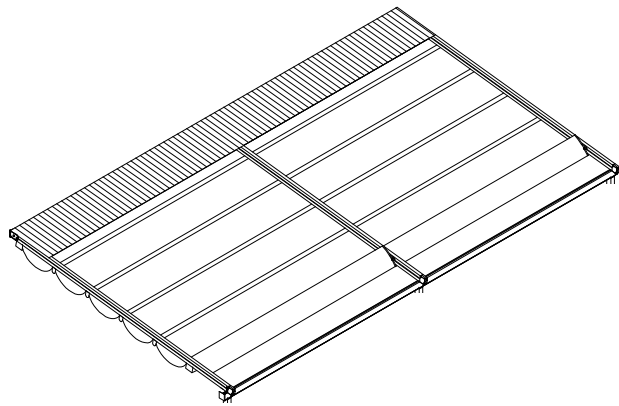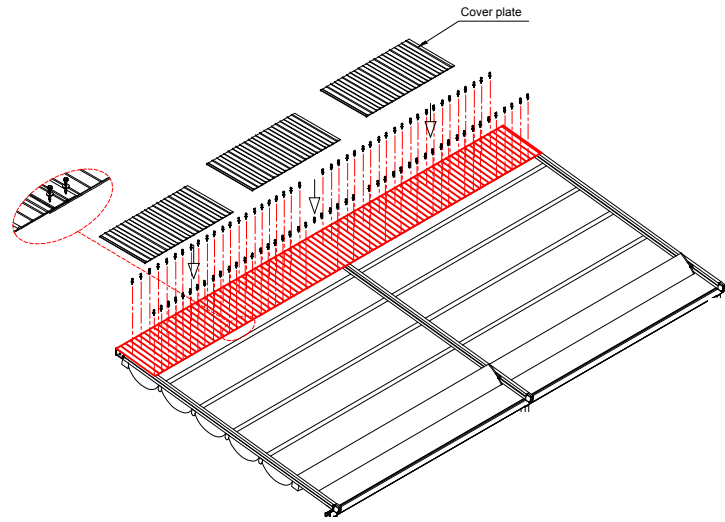

Press the programming button once. The programming is finished.

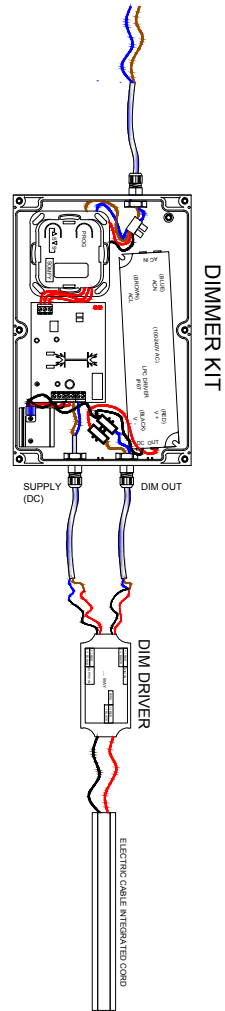


DIMMER KIT
INSTALLATION
(OPTIONAL)



Programming Dimmer Kit

- Step1:
The Dimmer Kit is already Programmed on Channel II on Remote Control if no;
- Step2:

 Check the channel for programming lights. Press the channel button to select the channel 2, make the channel 2 led light flashing.
- Step3:
 Press once to PROG. button which is inside the dimmer kit.
- Step4:

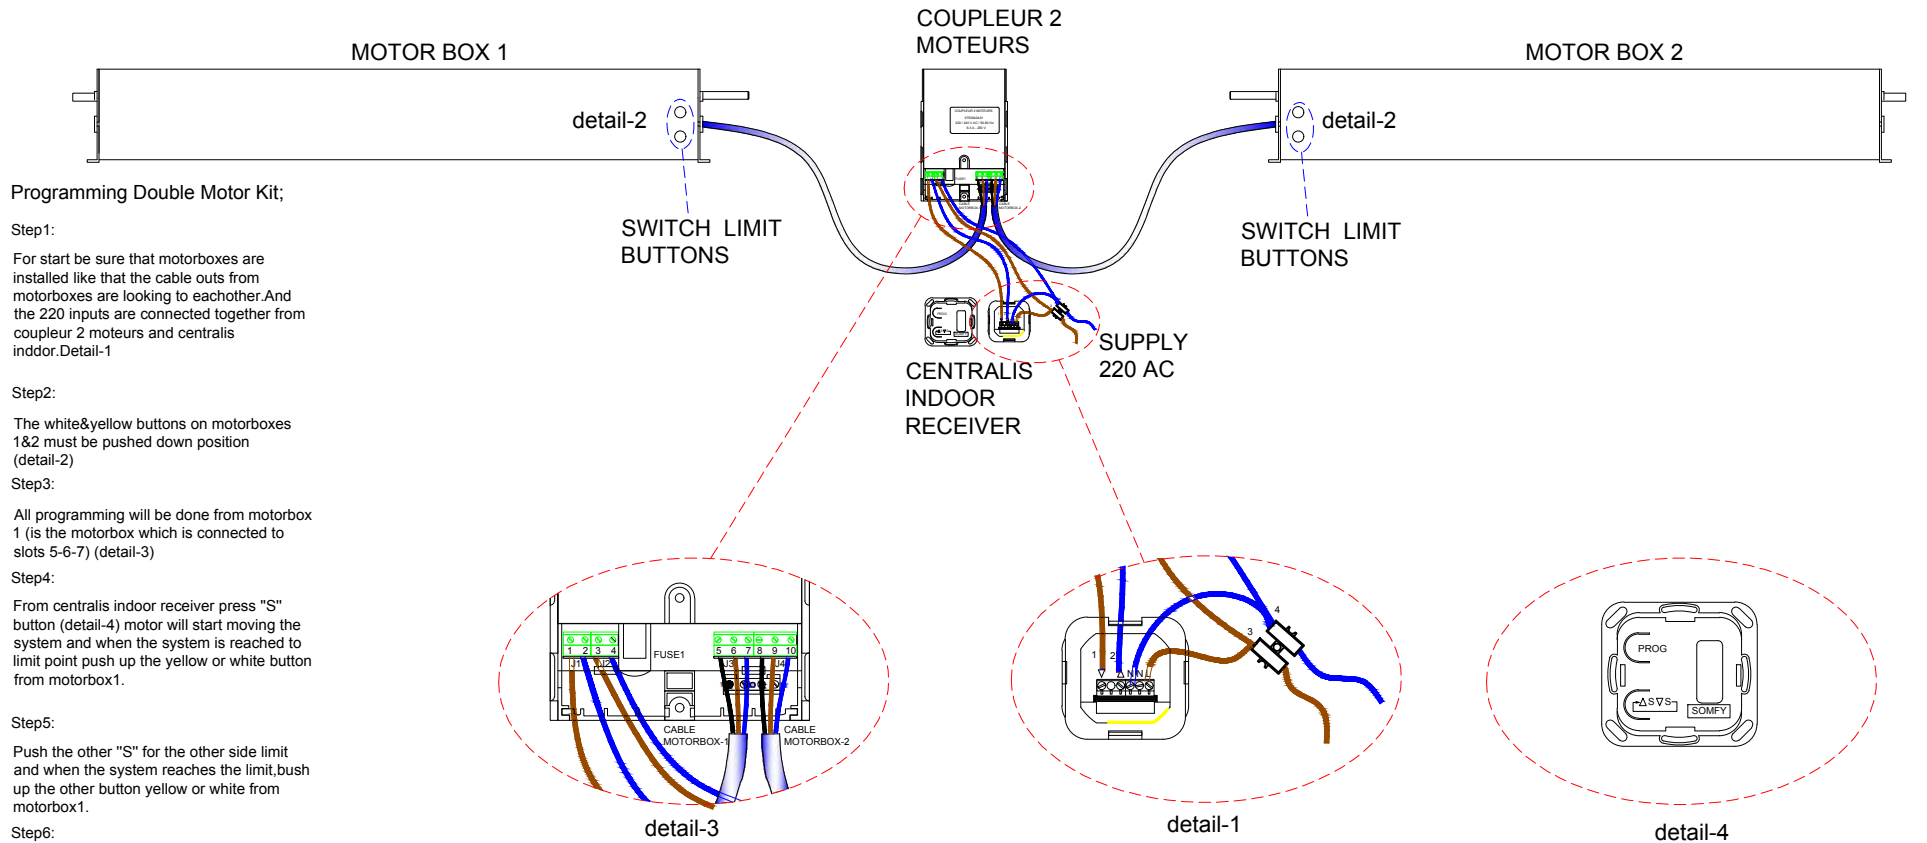 Press the programming button once. The programming is finished.

Double Motor Connection & Programming (Optional)



Programming Double Motor Kit;

Step1:

For start be sure that motorboxes are installed like that the cable outs from motorboxes are looking to eachother. And the 220 inputs are connected together from coupleur 2 moteurs and centralis indoor. Detail-1

Step2:

The white&yellow buttons on motorboxes 1&2 must be pushed down position (detail-2)

Step3:

All programming will be done from motorbox 1 (is the motorbox which is connected to slots 5-6-7) (detail-3)

Step4:

From centralis indoor receiver press "S" button (detail-4) motor will start moving the system and when the system is reached to limit point push up the yellow or white button from motorbox1.

Step5:

Push the other "S" for the other side limit and when the system reaches the limit, bush up the other button yellow or white from motorbox1.

Step6:

At the end to match the remote control with centralis indoor , press the prog button on thecentralis indoor receiver and press once on the remote control which is in the back side of the remote control.

Note:To change a limit push down the yellow or white button on motorbox-1 again and move the system to new limit point and push up the button again.

All information contained in this document was provided by the manufacturer of the components for this particular model. As a fabricator/distributor, Retractableawnings.com Inc. claims no liability with respect to these documents as we are not engineers and did not complete any of the information, engineering or calculations in this document.

All measurements in this document are metric. To convert from metric (meters, centimeters and millimeters) to imperial (feet and inches) visit this website:

http://www.onlineconversion.com/length_common.htm