

# Bioclimatique - Rotating louver installation instructions

Installation

FLOOR INSTALLATION BASE

 
STEP I



All weather protection systems!

**RETRACTABLE**  
**AWNINGS.COM**

Tel (305) 628-2424  
Tel (866) 438-2964  
info@retractableawnings.com

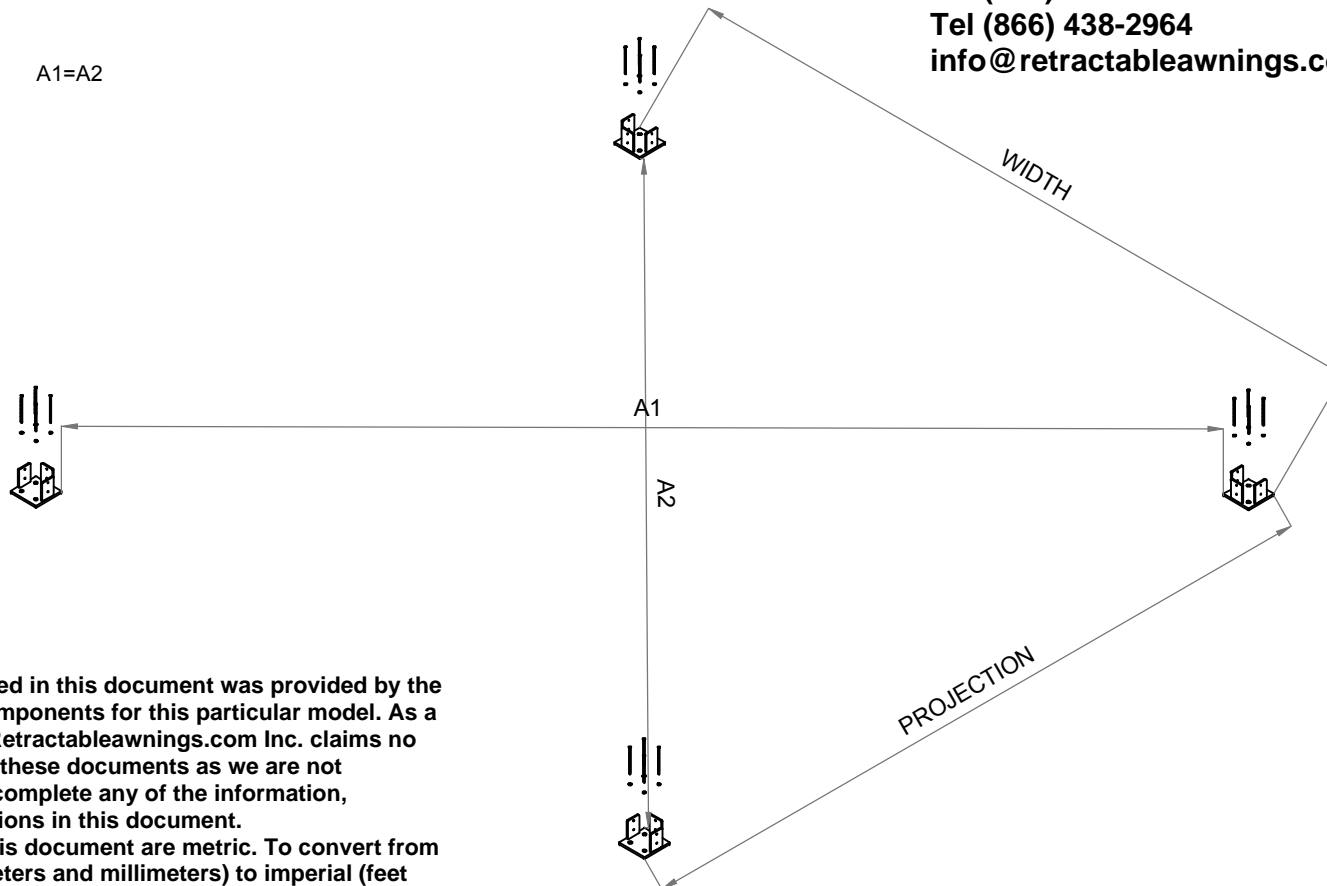

All information contained in this document was provided by the manufacturer of the components for this particular model. As a fabricator/distributor, Retractableawnings.com Inc. claims no liability with respect to these documents as we are not engineers and did not complete any of the information, engineering or calculations in this document.

All measurements in this document are metric. To convert from metric (meters, centimeters and millimeters) to imperial (feet and inches) visit this website:


[http://www.onlineconversion.com/length\\_common.htm](http://www.onlineconversion.com/length_common.htm)

# Bioclimatique - Rotating louver

 Installation

INSTALLATION POST

STEP II-A

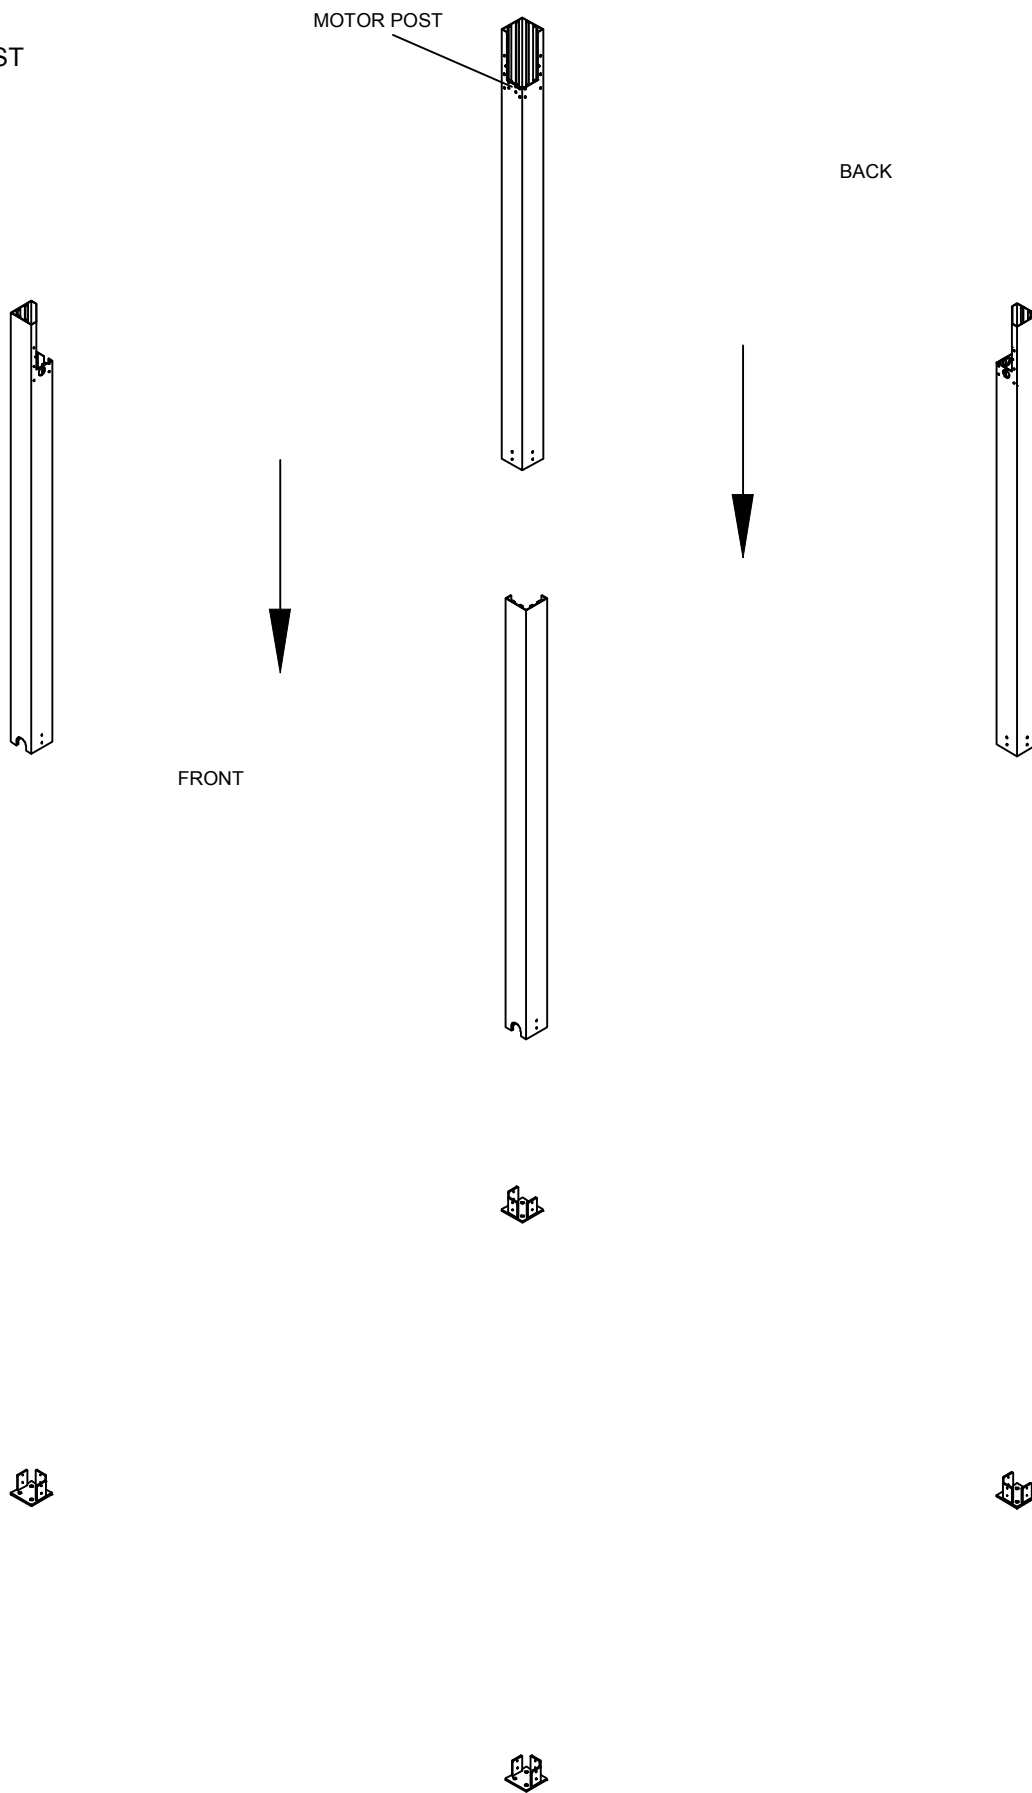


# Bioclimatique - Rotating louver

Installation

## INSTALLATION POST

 STEP II-B

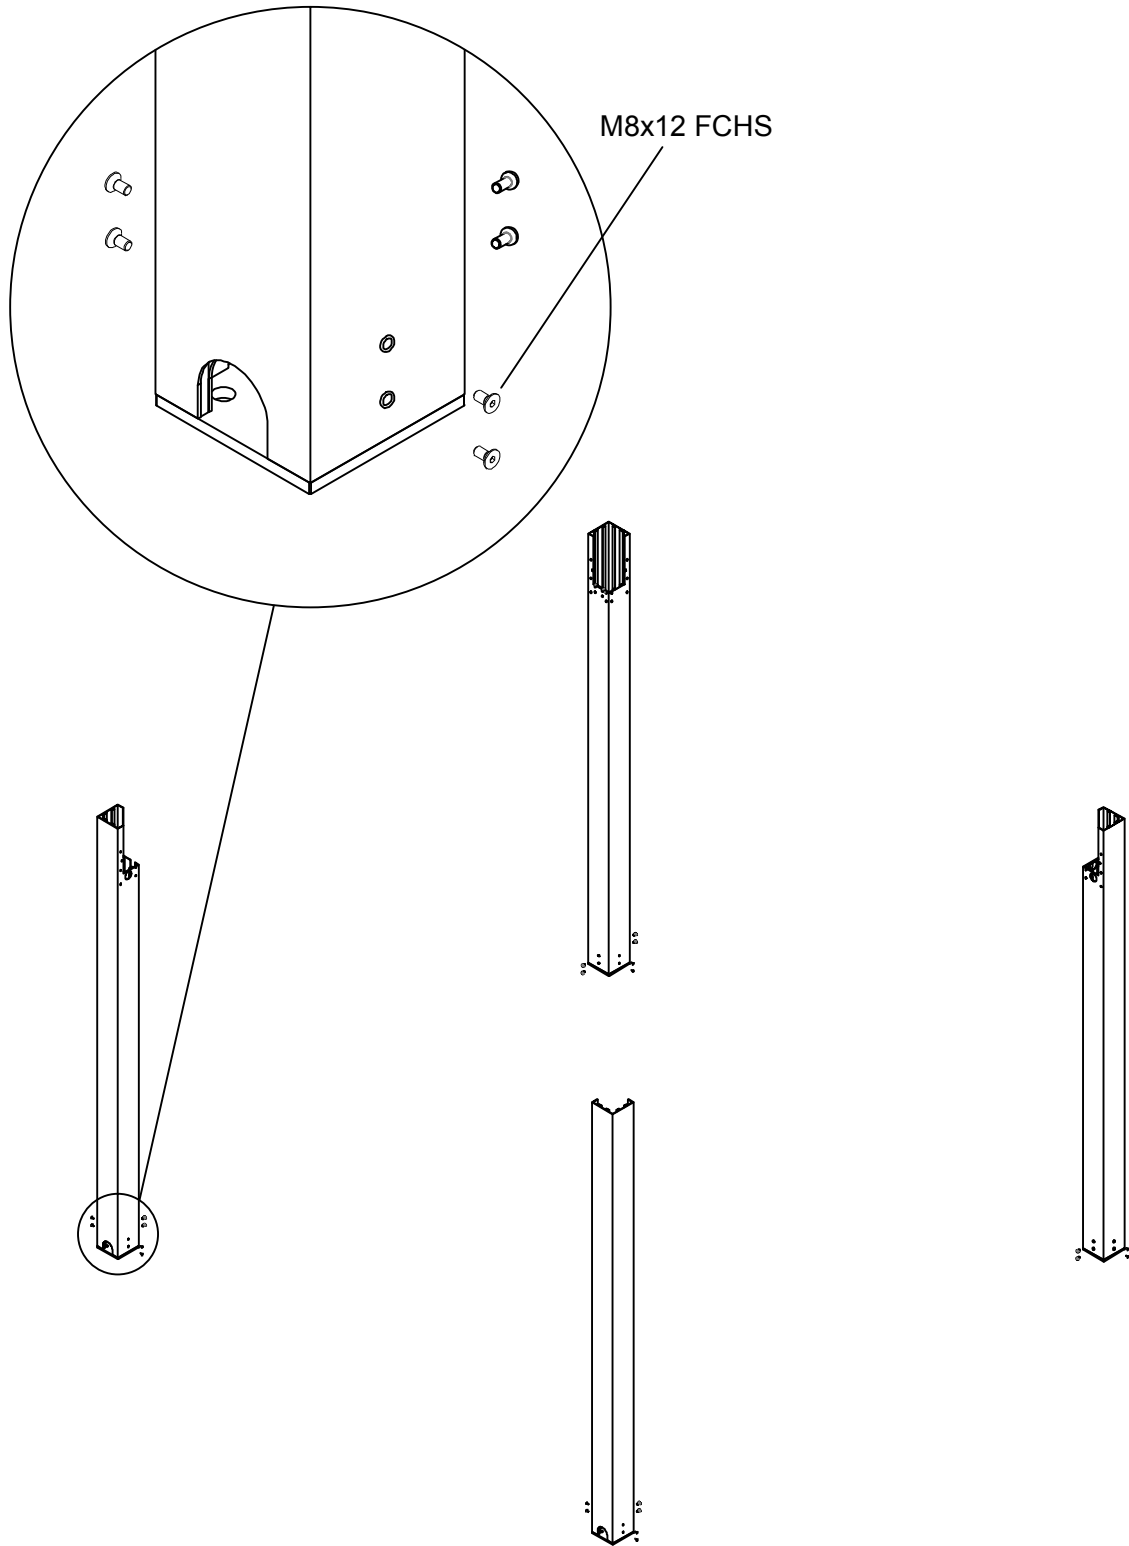


# Bioclimatique - Rotating louver

Installation

RAFTER-COLUMN

 STEP III

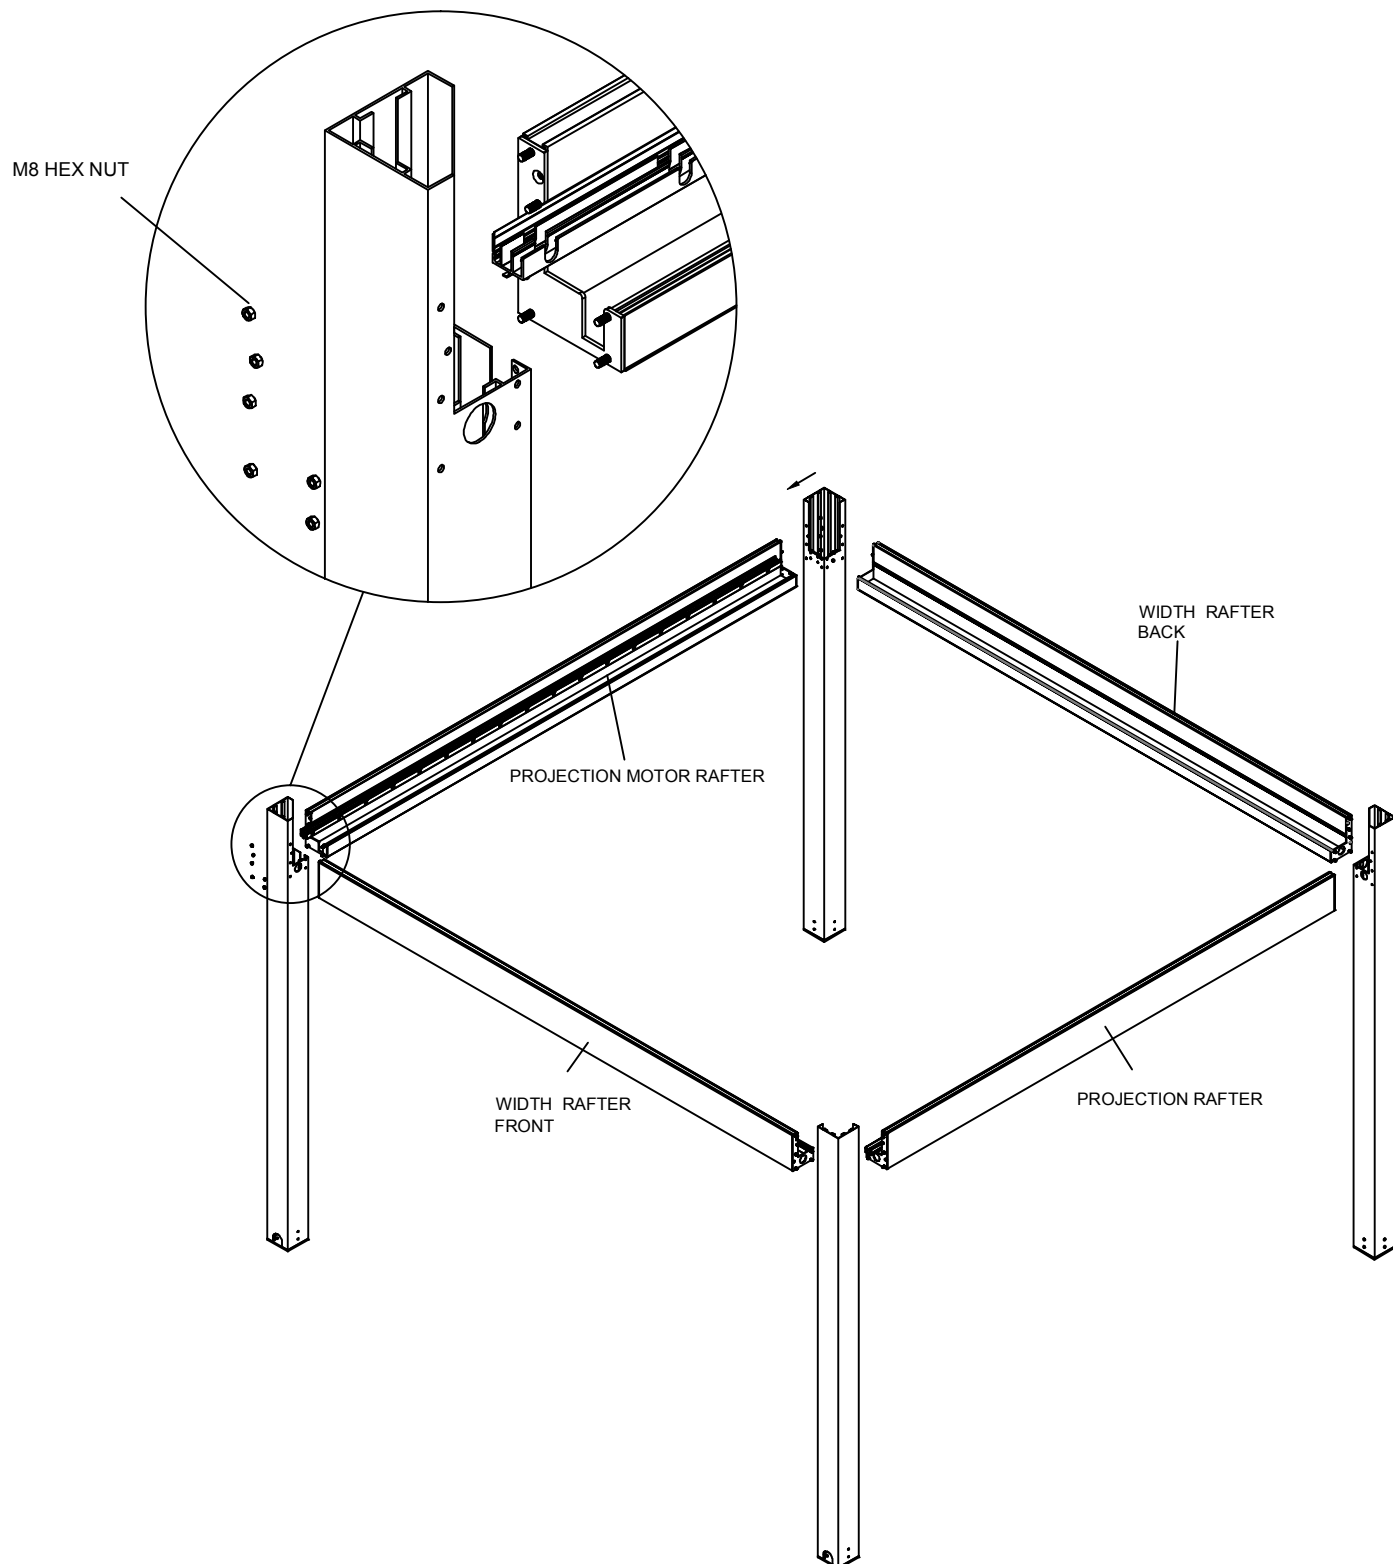


# Bioclimatique - Rotating louver

Installation

MOTOR KIT

 STEP IV

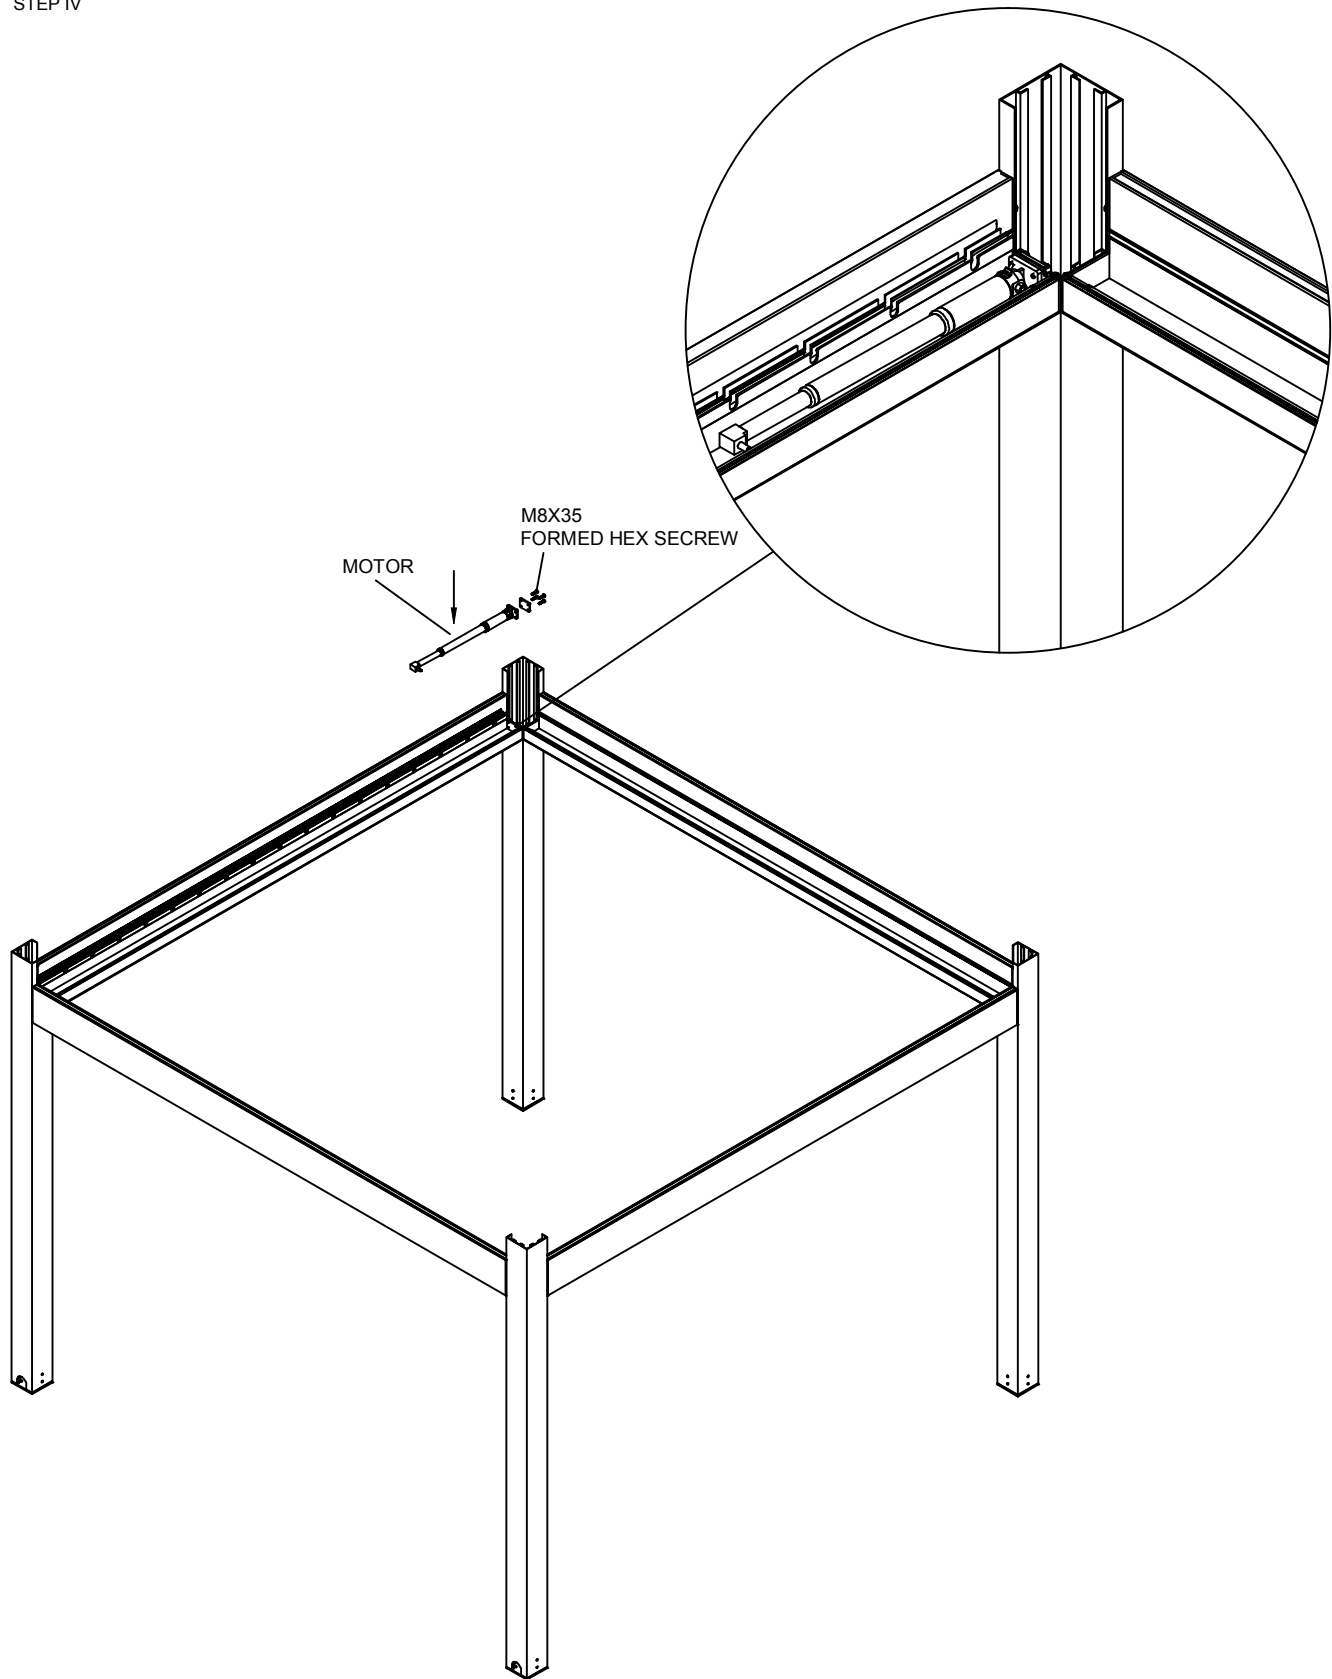


# Bioclimatique - Rotating louver

Installation

MOTOR LOUVRE-INNER SUPPORT BAR

 STEP V

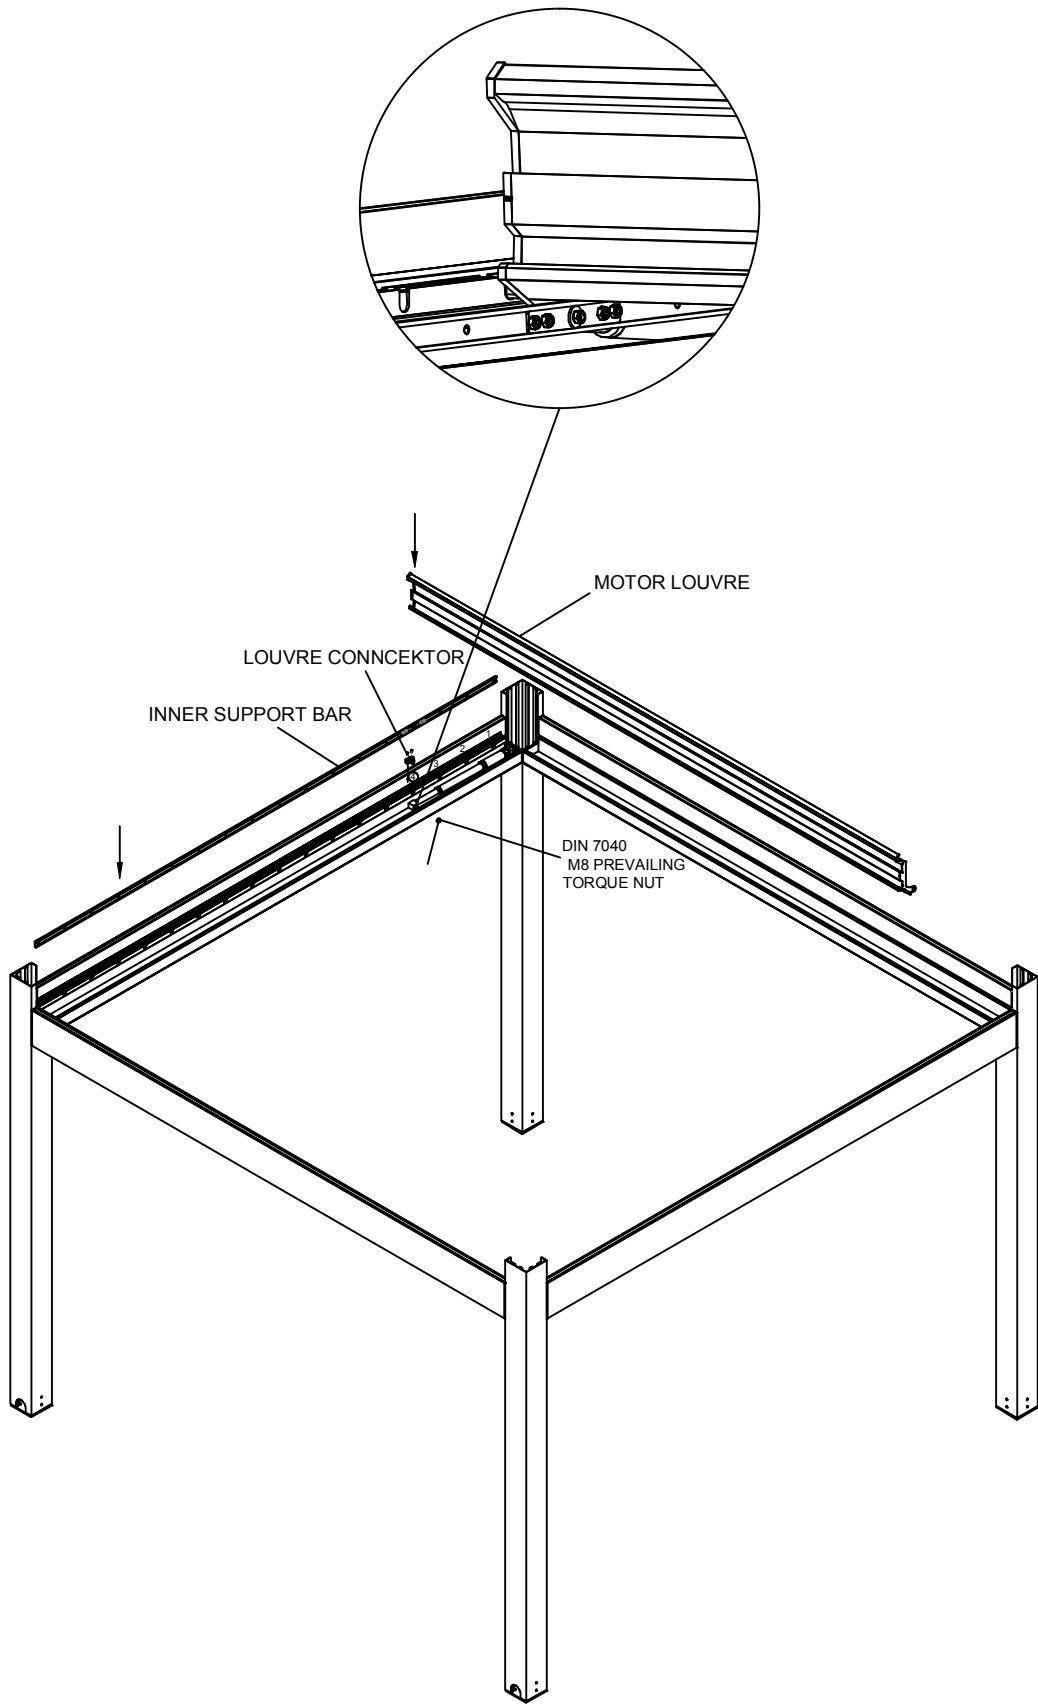


# Bioclimatique - Rotating louver

Installation

LOUVRE

 STEP VI


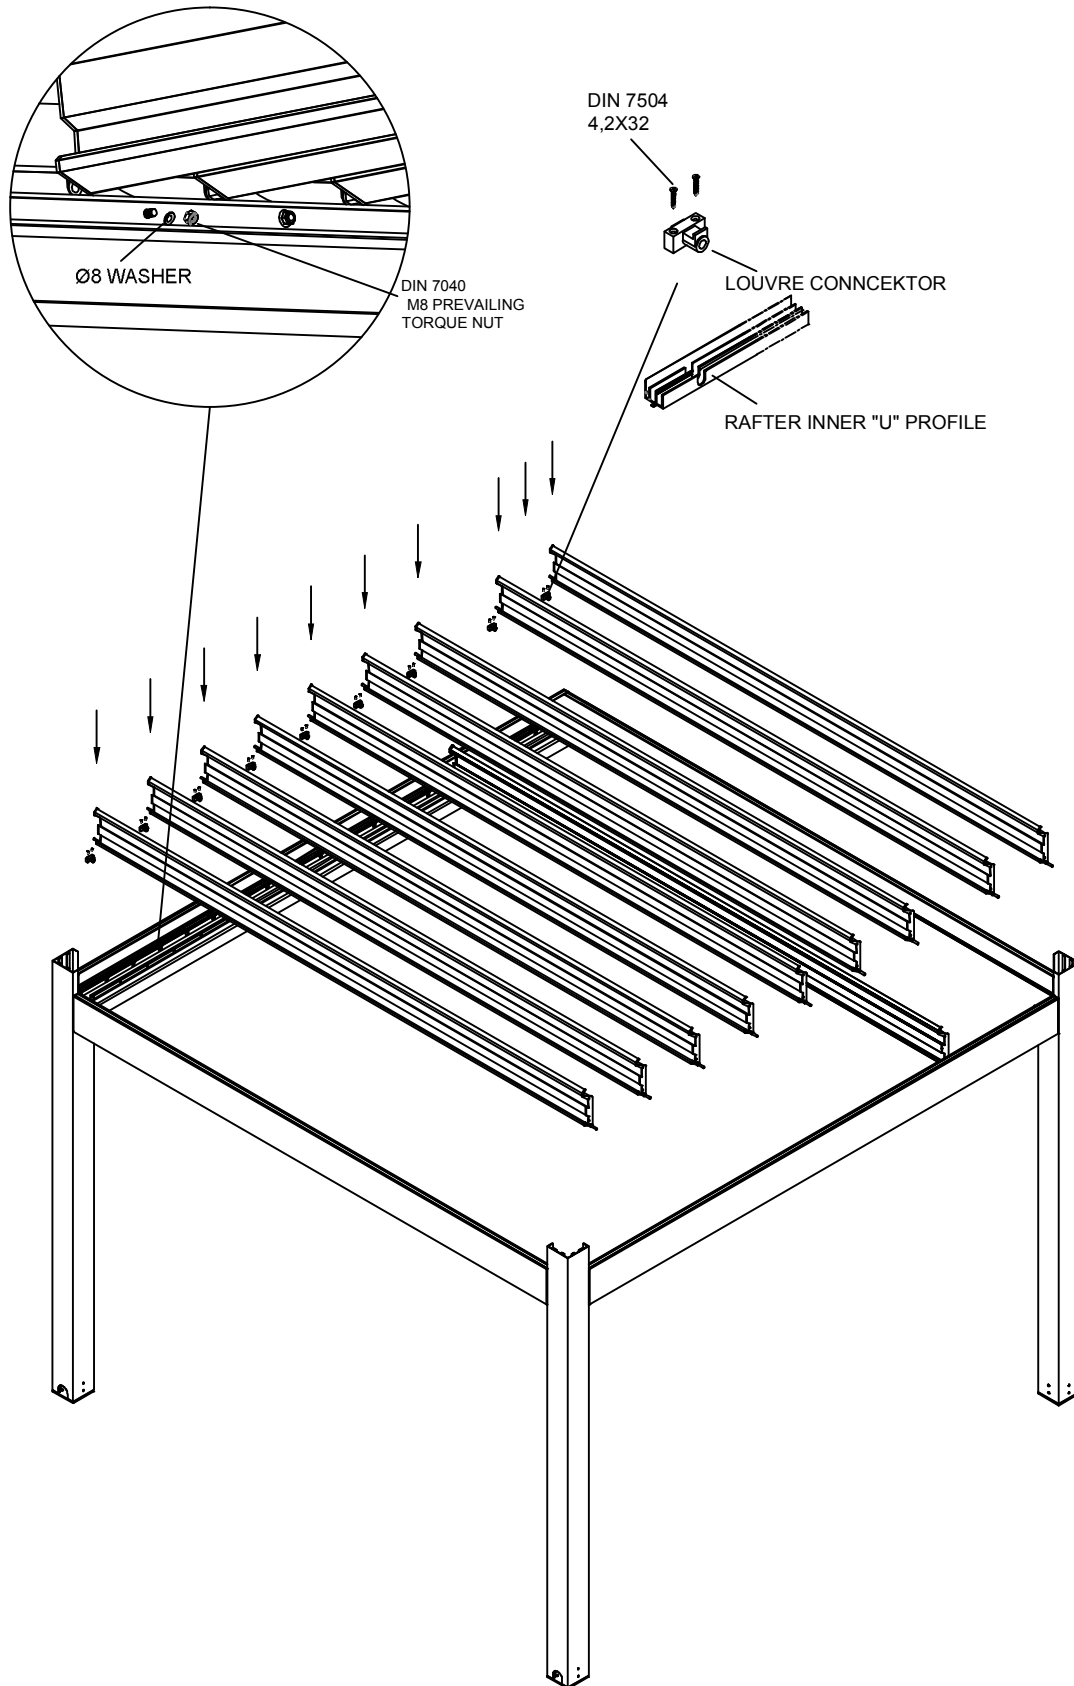


# Bioclimatique - Retractable louver

Installation

INNER "U" PROFILE COVER CAP

  STEP VII

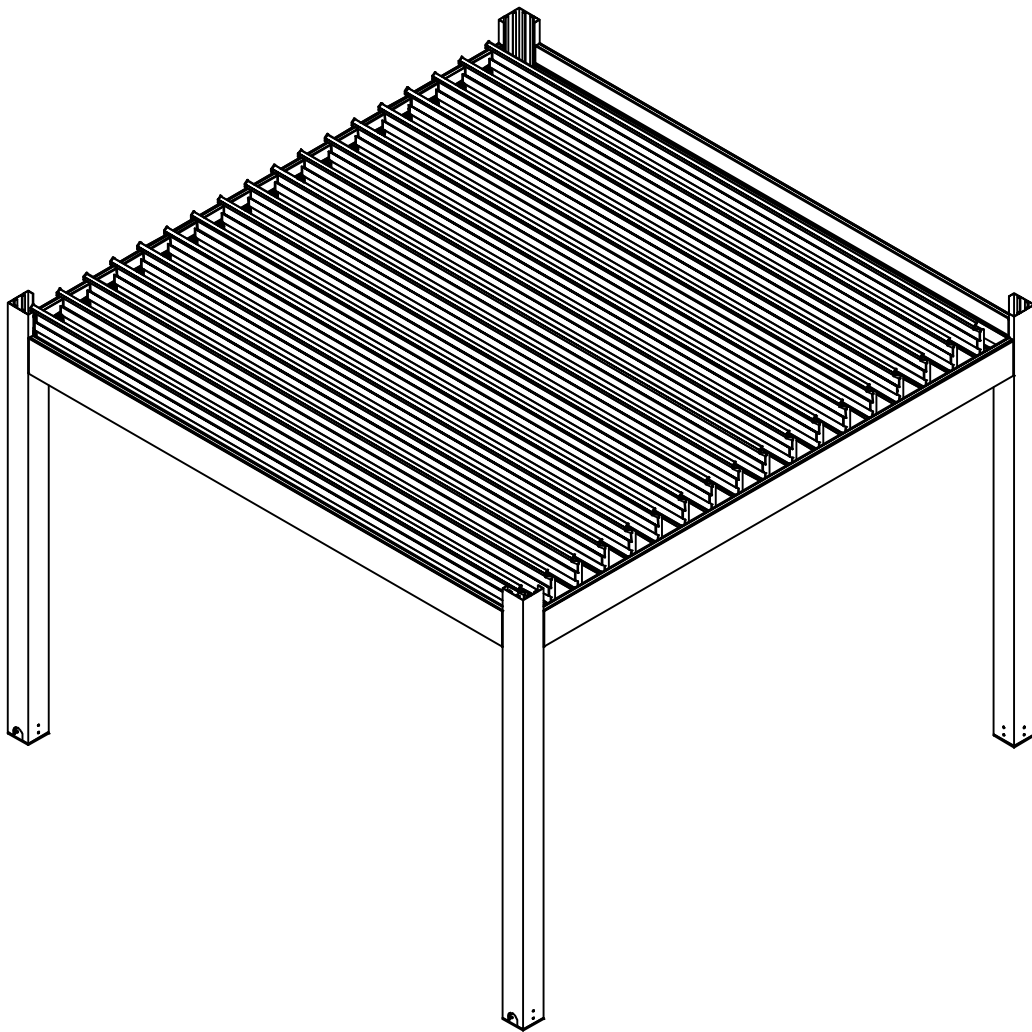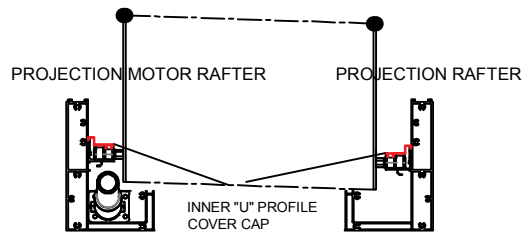




# Bioclimatique - Rotating louver

Installation


## RAFTER CLOSURE PROFILE

STEP VIII

 
PROJECTION MOTOR RAFTER      PROJECTION RAFTER

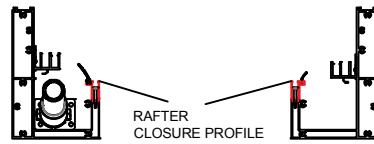

 WIDTH RAFTER      DIN 7504 4,2X38      WIDTH RAFTER

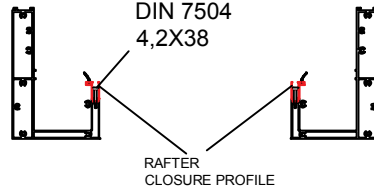

## RAFTER CLOSURE PROFILE


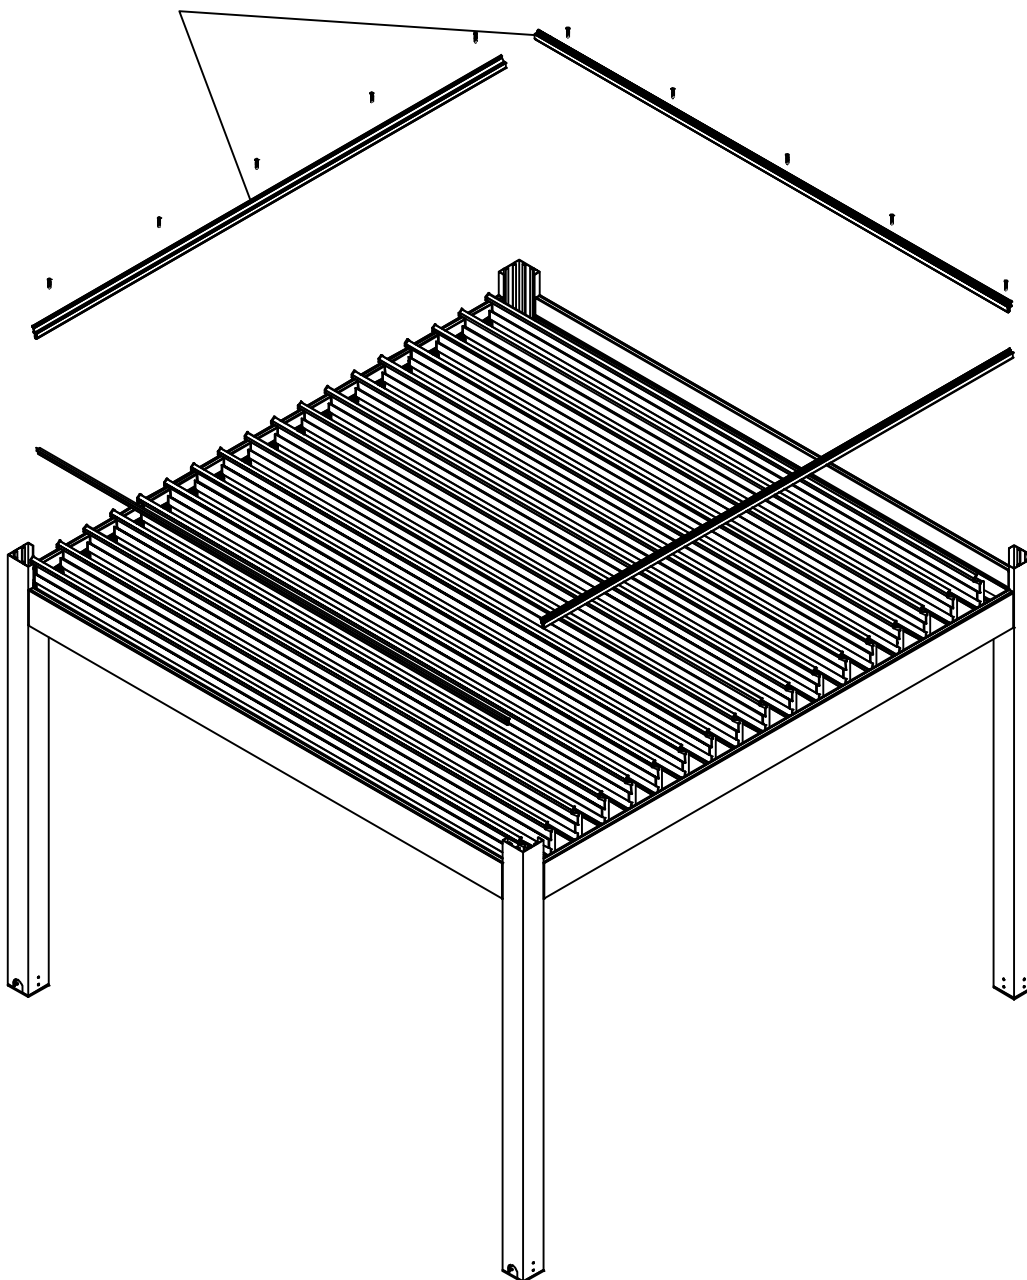 


# Bioclimatique - Rotating louver

Installation

## LIGHTING STRIPE PROFILE CONNECTOR

  STEP IX

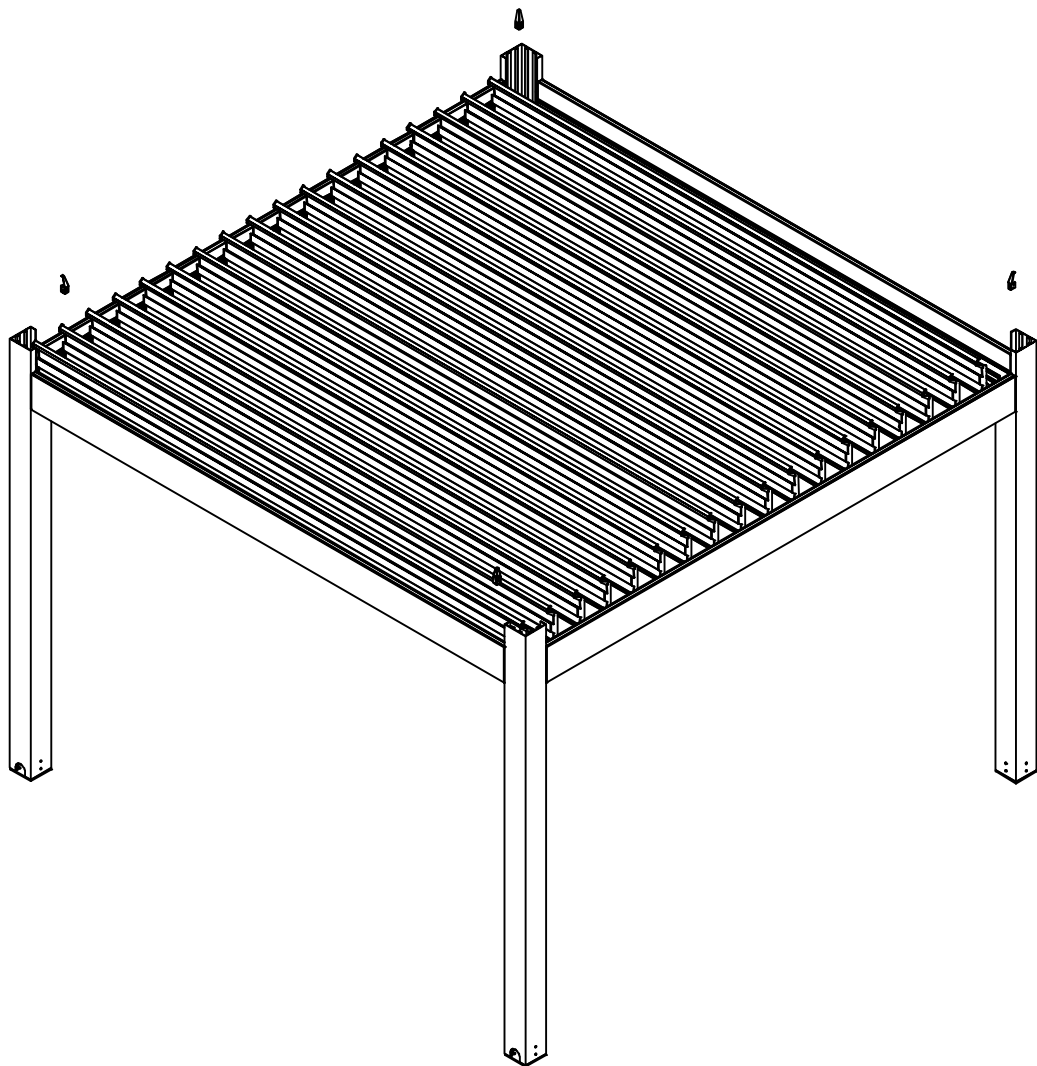
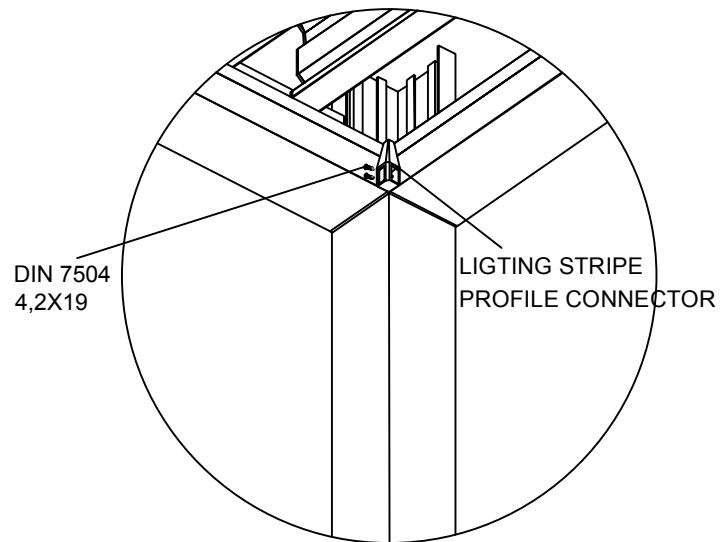


# Bioclimatique - Rotating louver

Installation

## LIGHTING STRIPE PROFILE

  STEP X-A

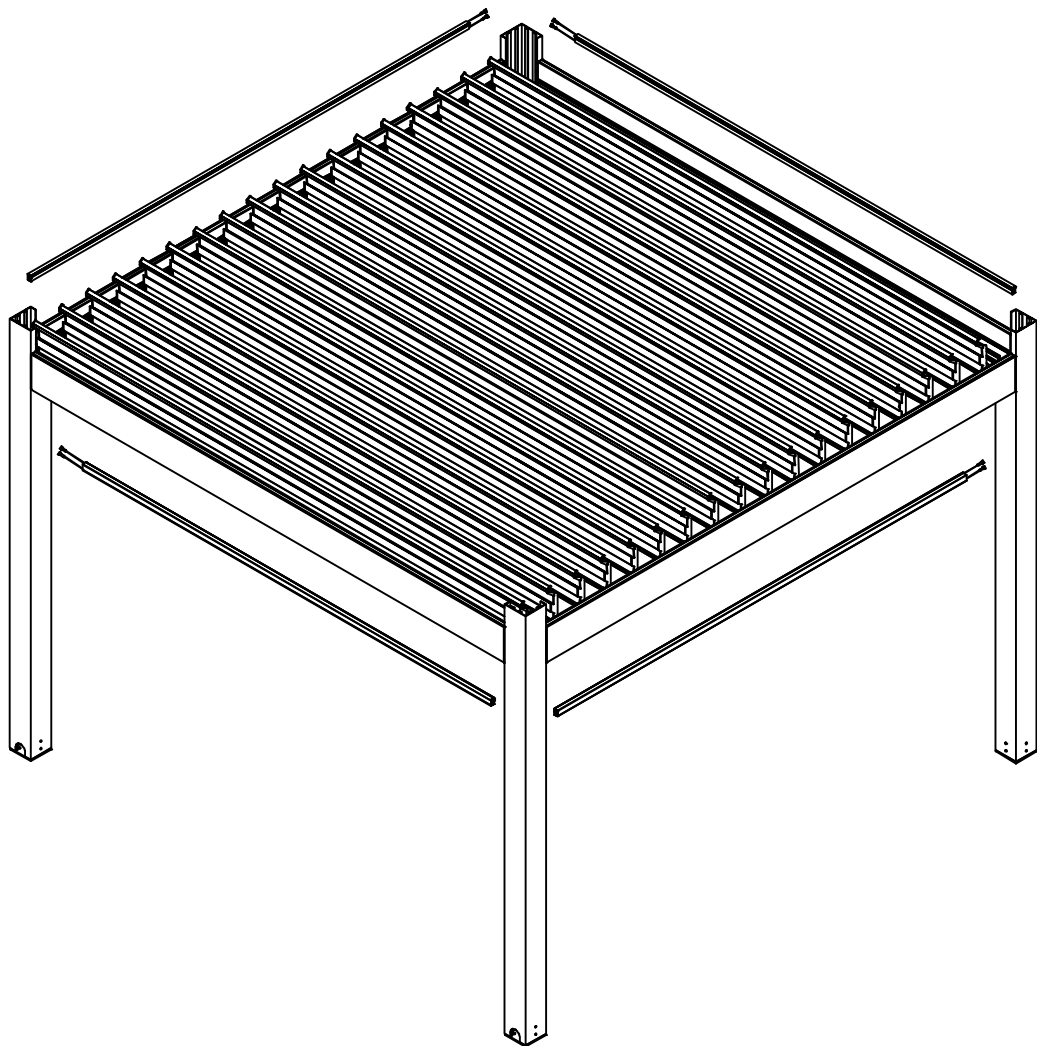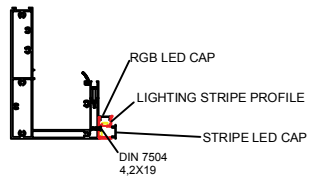


# Bioclimatique - Rotating louver

Installation

## LIGHTING STRIPE PROFILE

 STEP X-B


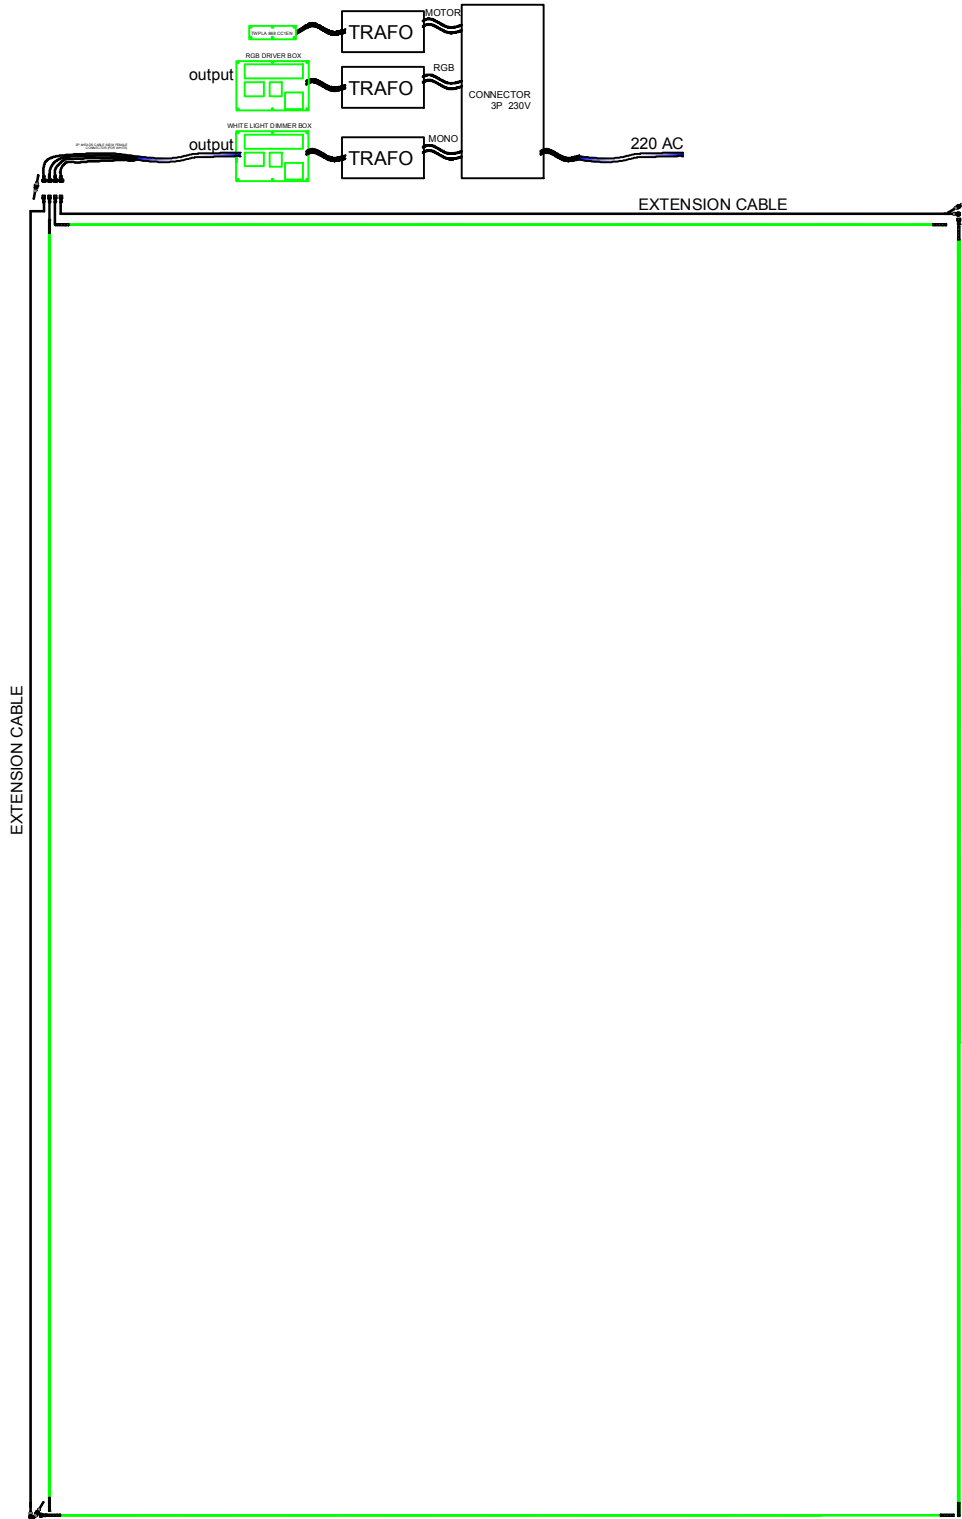


# Bioclimatique - Rotating louver

Installation

## EDGE COVER PROFILE

  STEP XI

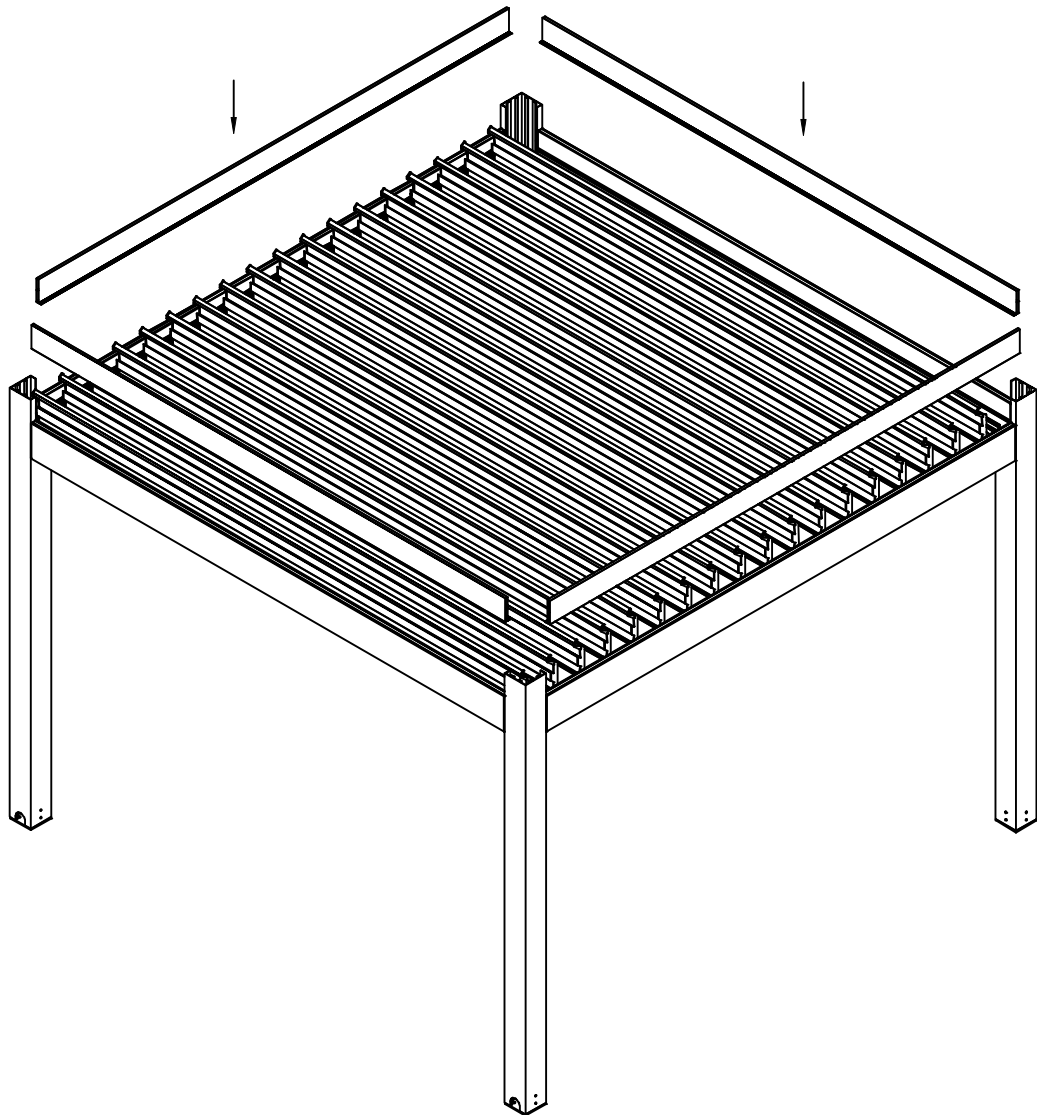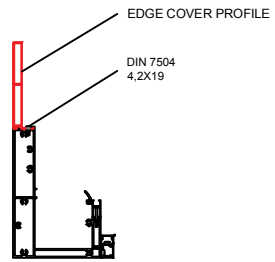


# Bioclimatique - Rotating louver

Installation

COLUMN CORNER COVER PLATE

 STEP XII

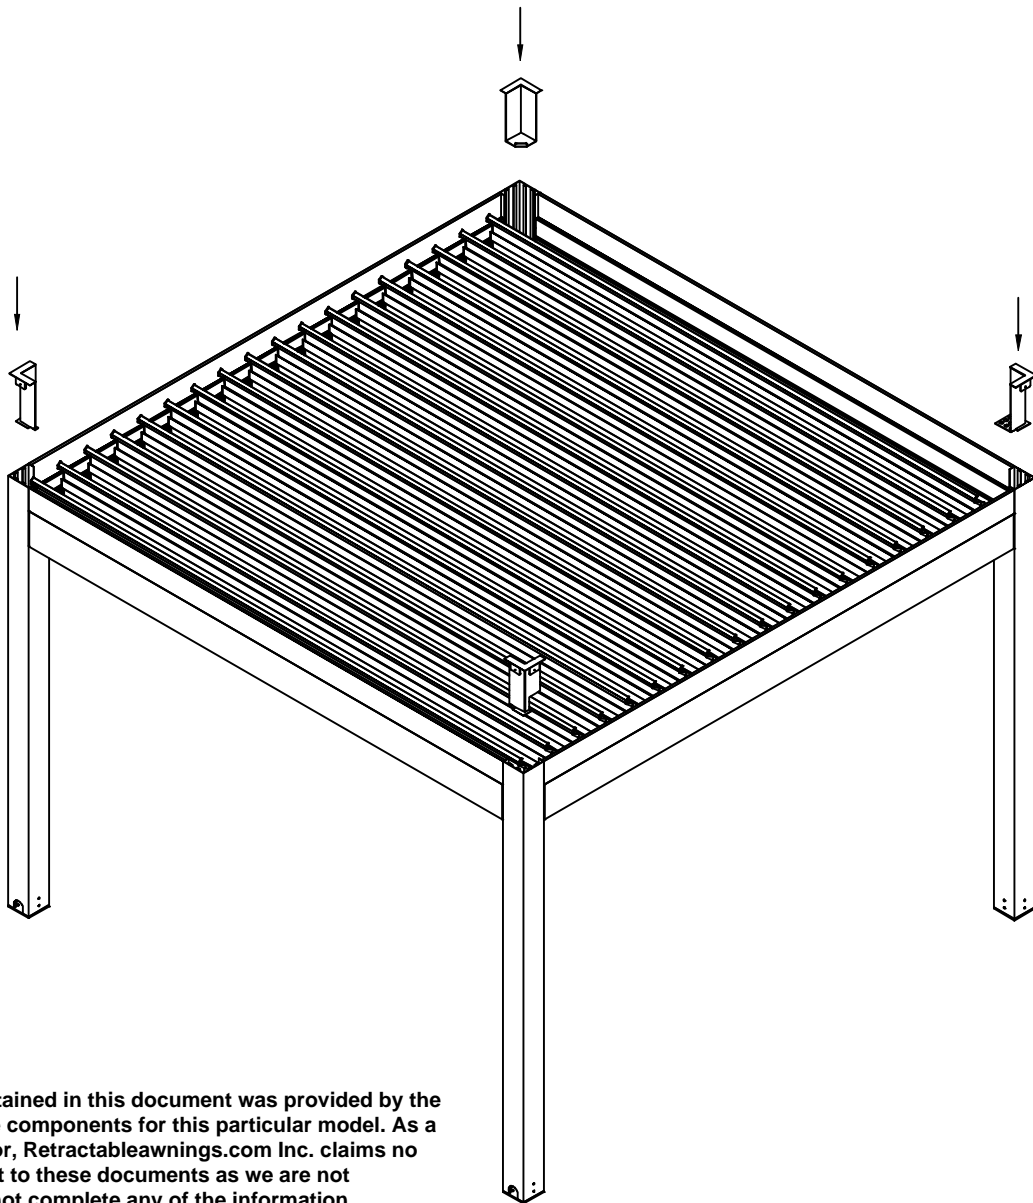

All information contained in this document was provided by the manufacturer of the components for this particular model. As a fabricator/distributor, Retractableawnings.com Inc. claims no liability with respect to these documents as we are not engineers and did not complete any of the information, engineering or calculations in this document.

All measurements in this document are metric. To convert from metric (meters, centimeters and millimeters) to imperial (feet and inches) visit this website:

[http://www.onlineconversion.com/length\\_common.htm](http://www.onlineconversion.com/length_common.htm)