

SANLIURFA INSTALLATION INSTRUCTIONS

01



All weather protection systems!

RETRACTABLE
AWNINGS.COM


XL VERSION

Important: See separate instructions for the installation of the support structures middle posts/columns

IA = Interaxis between conveyor rafter bars

One Module

200 cm > 450 cm

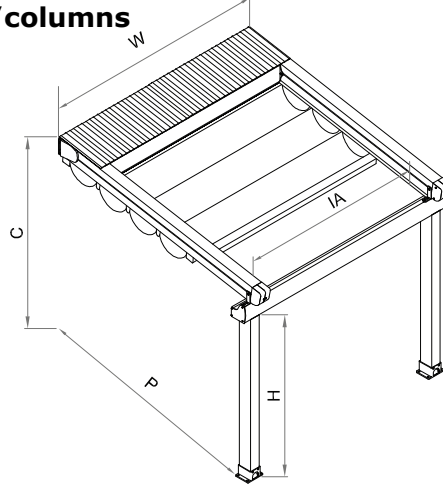

Tel (305) 628-2424


Tel (866) 438-2964

info@retractableawnings.com

Ignore the installation of the posts as shown in the directions below
Ignore the angled guides and assume instead the guides are curved


Two Module

450 cm > 900 cm

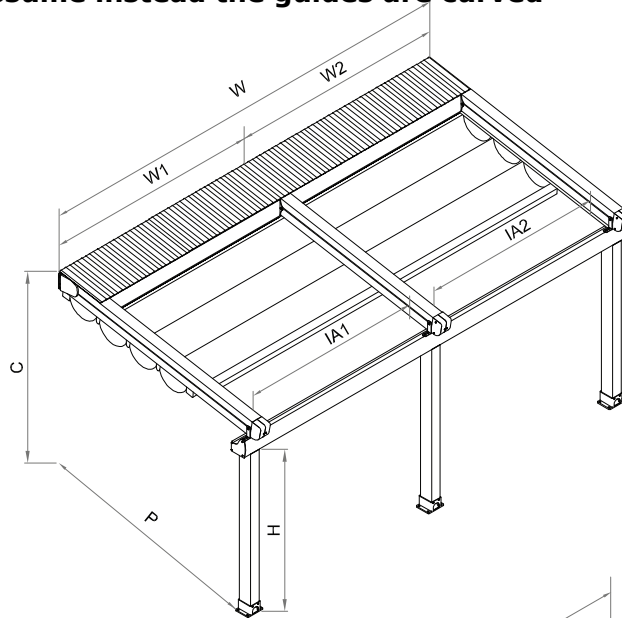

Three Module

900 cm > 1300 cm

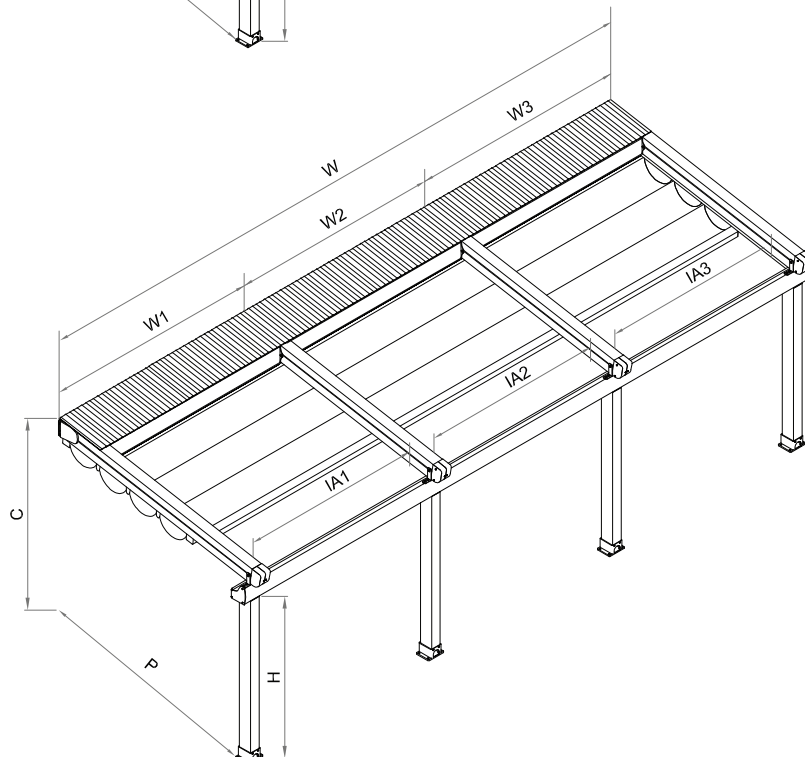


http://www.onlineconversion.com/length_common.htm
All information contained in this document was provided by the manufacturer of the components for this particular model. As a fabricator/distributor, Retractableawnings.com Inc. claims no liability with respect to these documents as we are not engineers and did not complete any of the information, engineering or calculations in this document.


All measurements in this document are metric. To convert from metric (meters, centimeters and millimeters) to imperial (feet and inches) visit this website:
http://www.onlineconversion.com/length_common.htm

STEP I


Install wall brackets using suitable fixings for site requirements. Ensure all wall brackets are same level with each other and correct width apart to match the conveyor rafters on your system.

Note : The tolerance value for " W1,W2,W3" is (+ 12.50 mm , -12.50 mm)

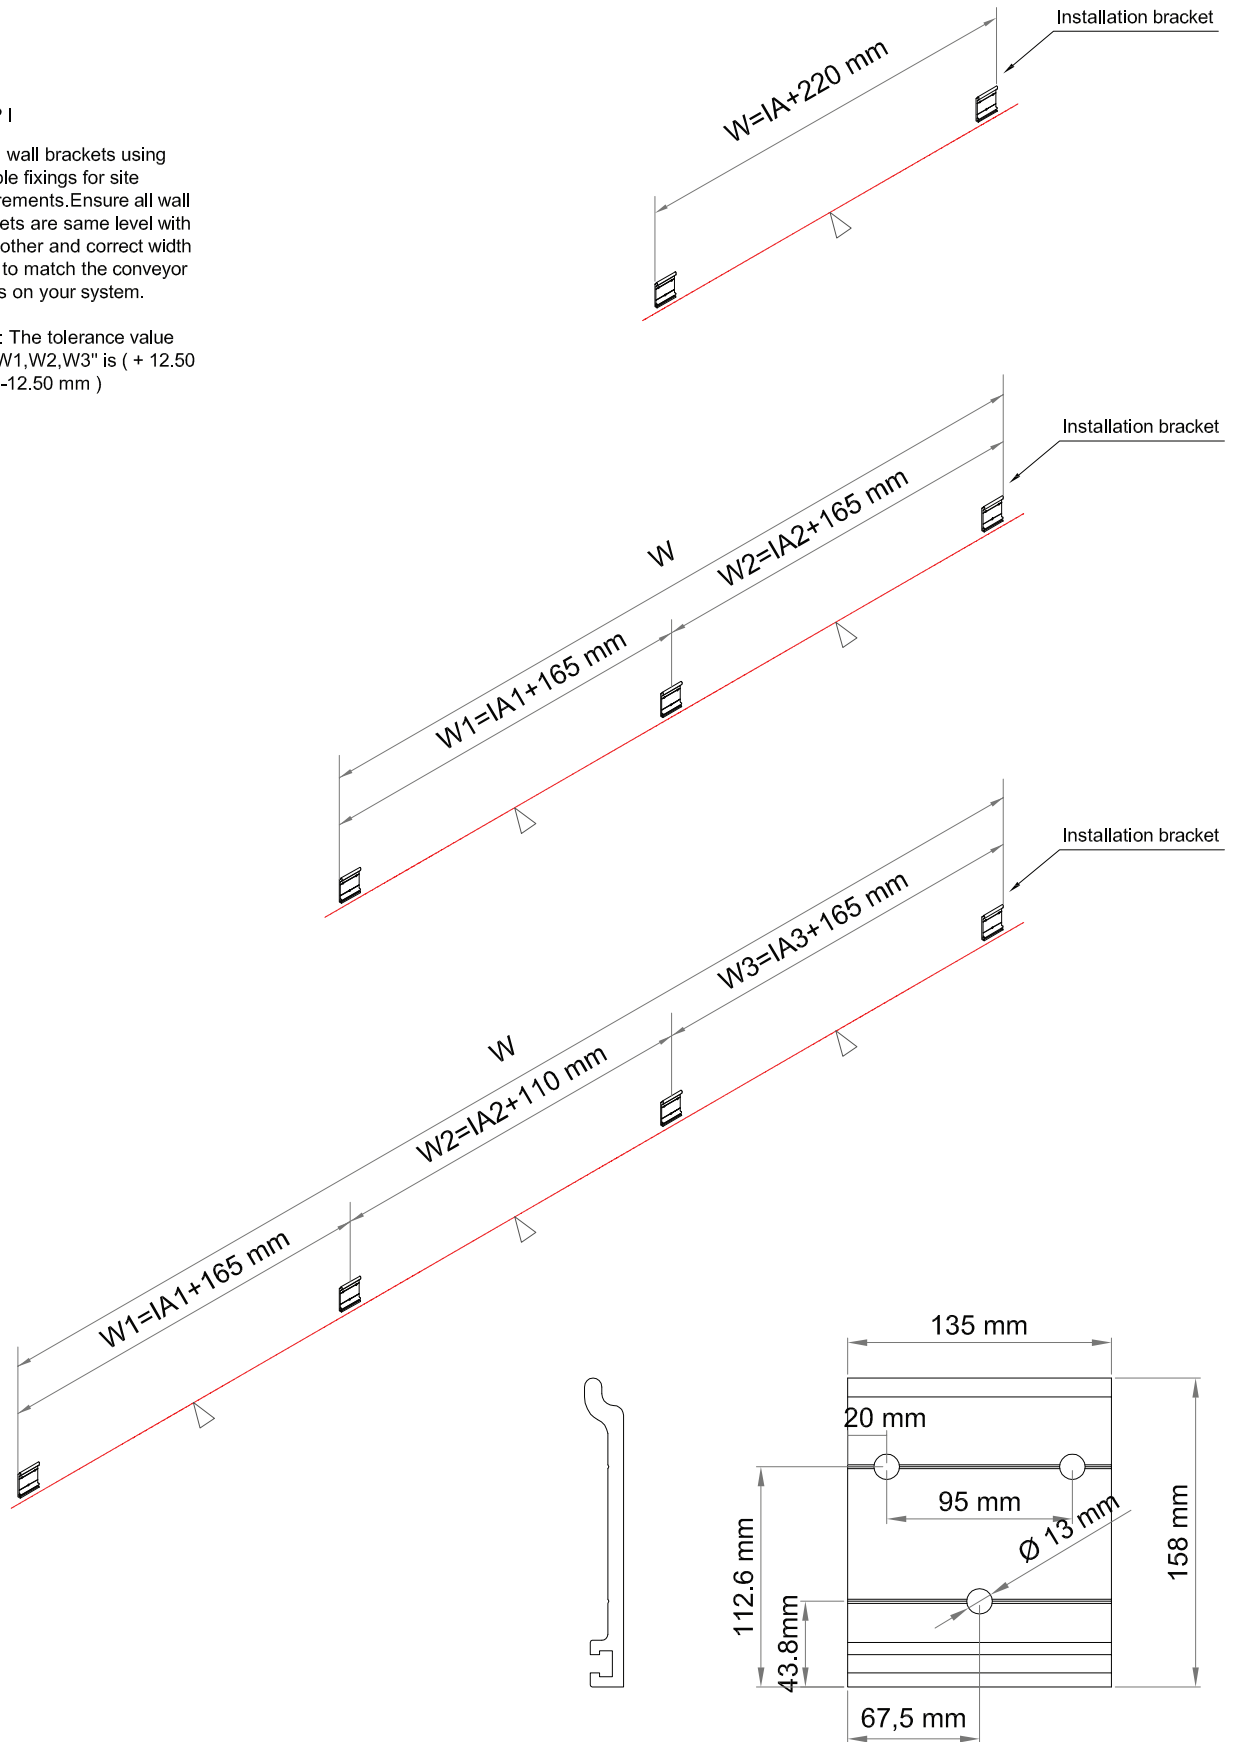

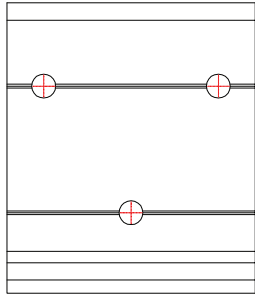


Sign the holes

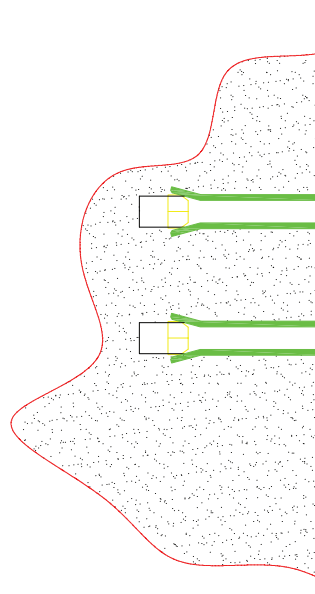


Extract the M12 x 100
steel bolts




Drill the holes by \varnothing 17
depth 100 mm

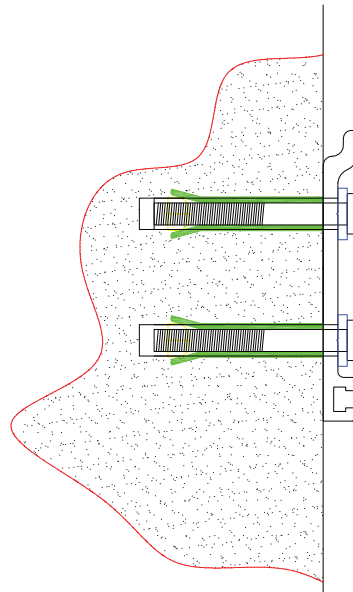

Tighten the steel bolts
with installation brackets

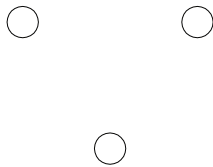


Drill the holes by \varnothing 17
depth 100 mm

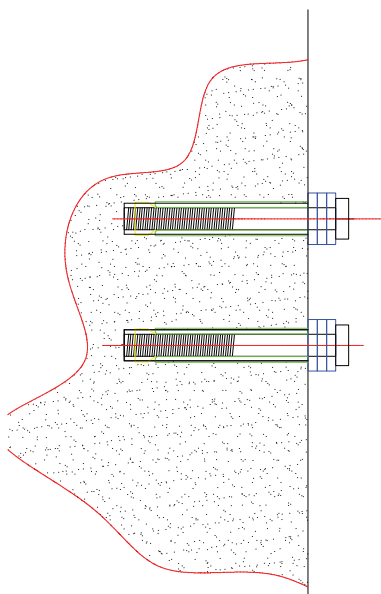


Tighten the M12 x 100
steel bolts clockwise
direction by \varnothing 19 wrench



STEP II

Establishment of front
columns & front rafter bar
(gutter)

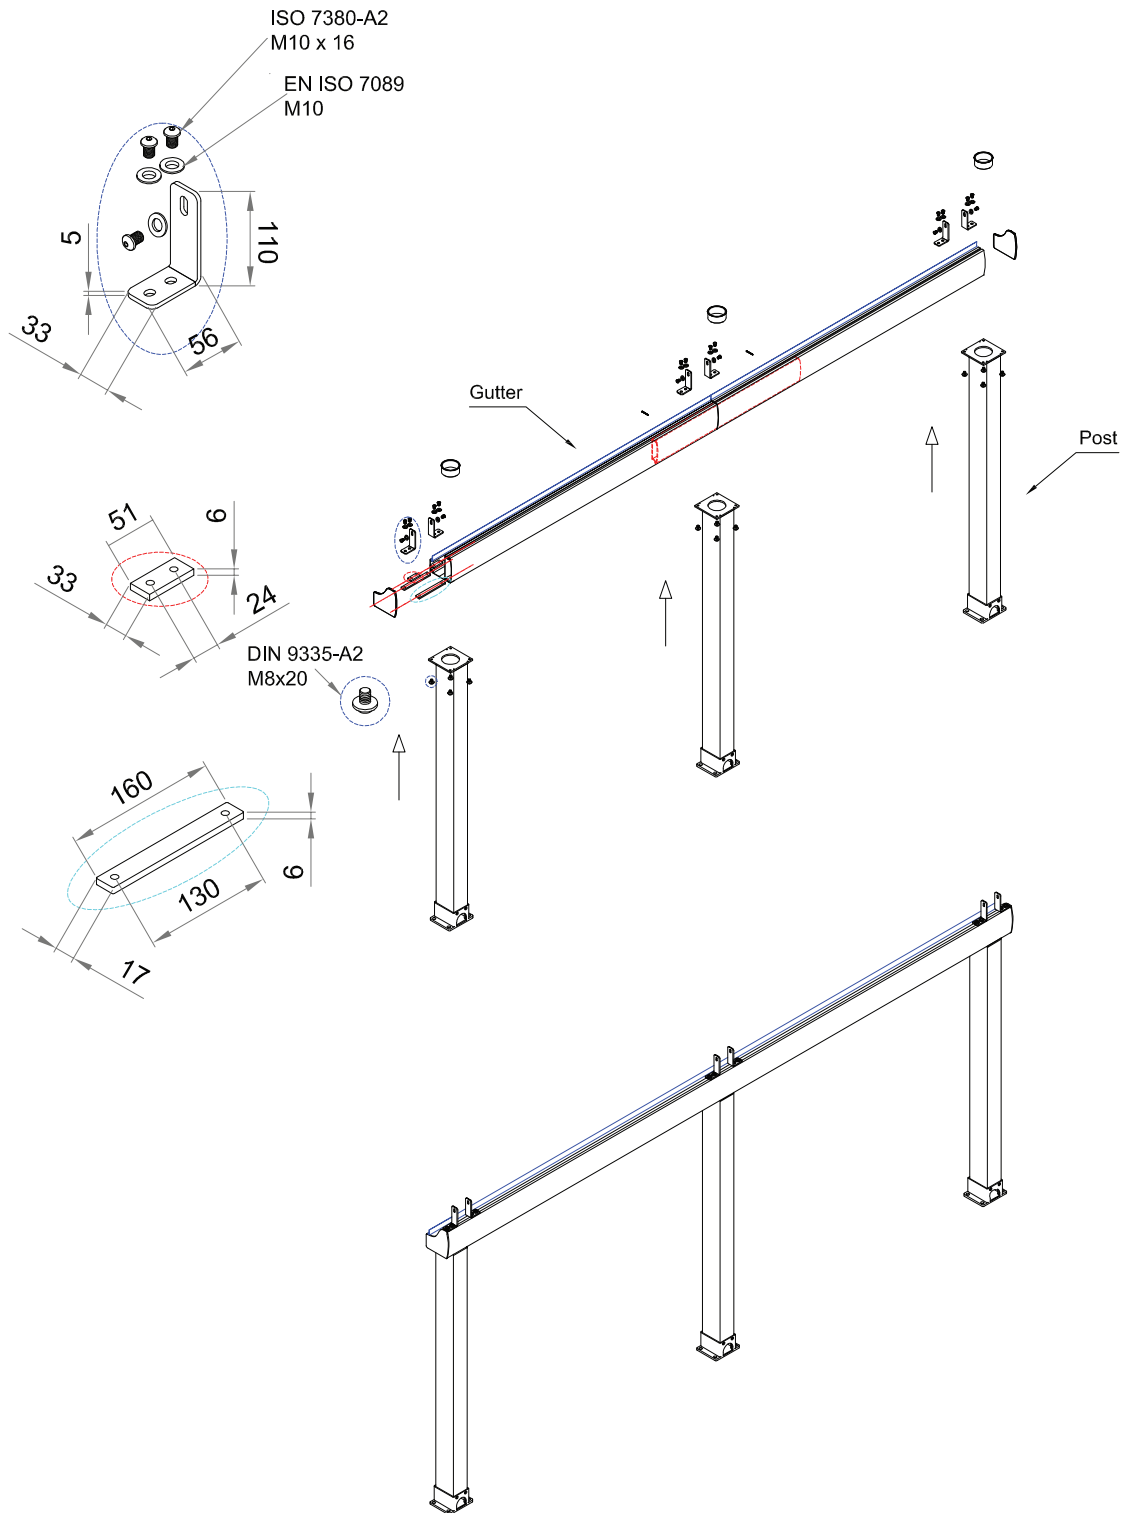

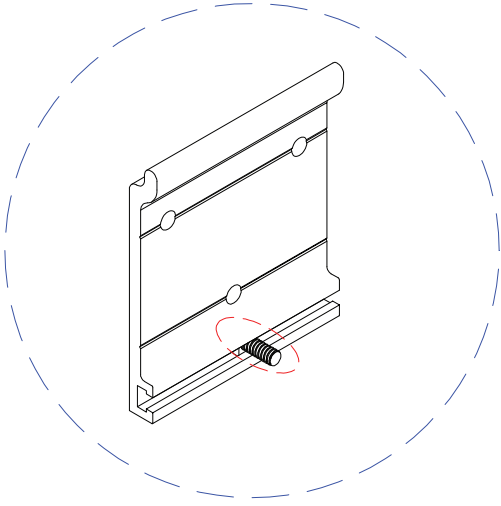



M8 x 20.5

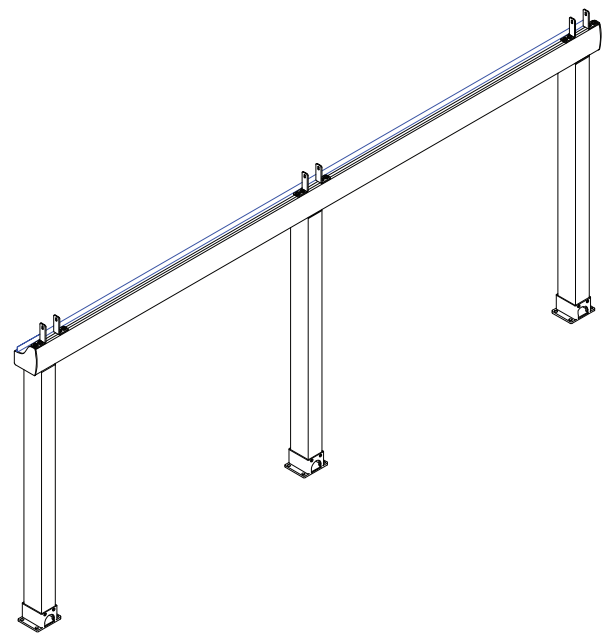 

STEP III


Installation of conveyor
rafter bars.

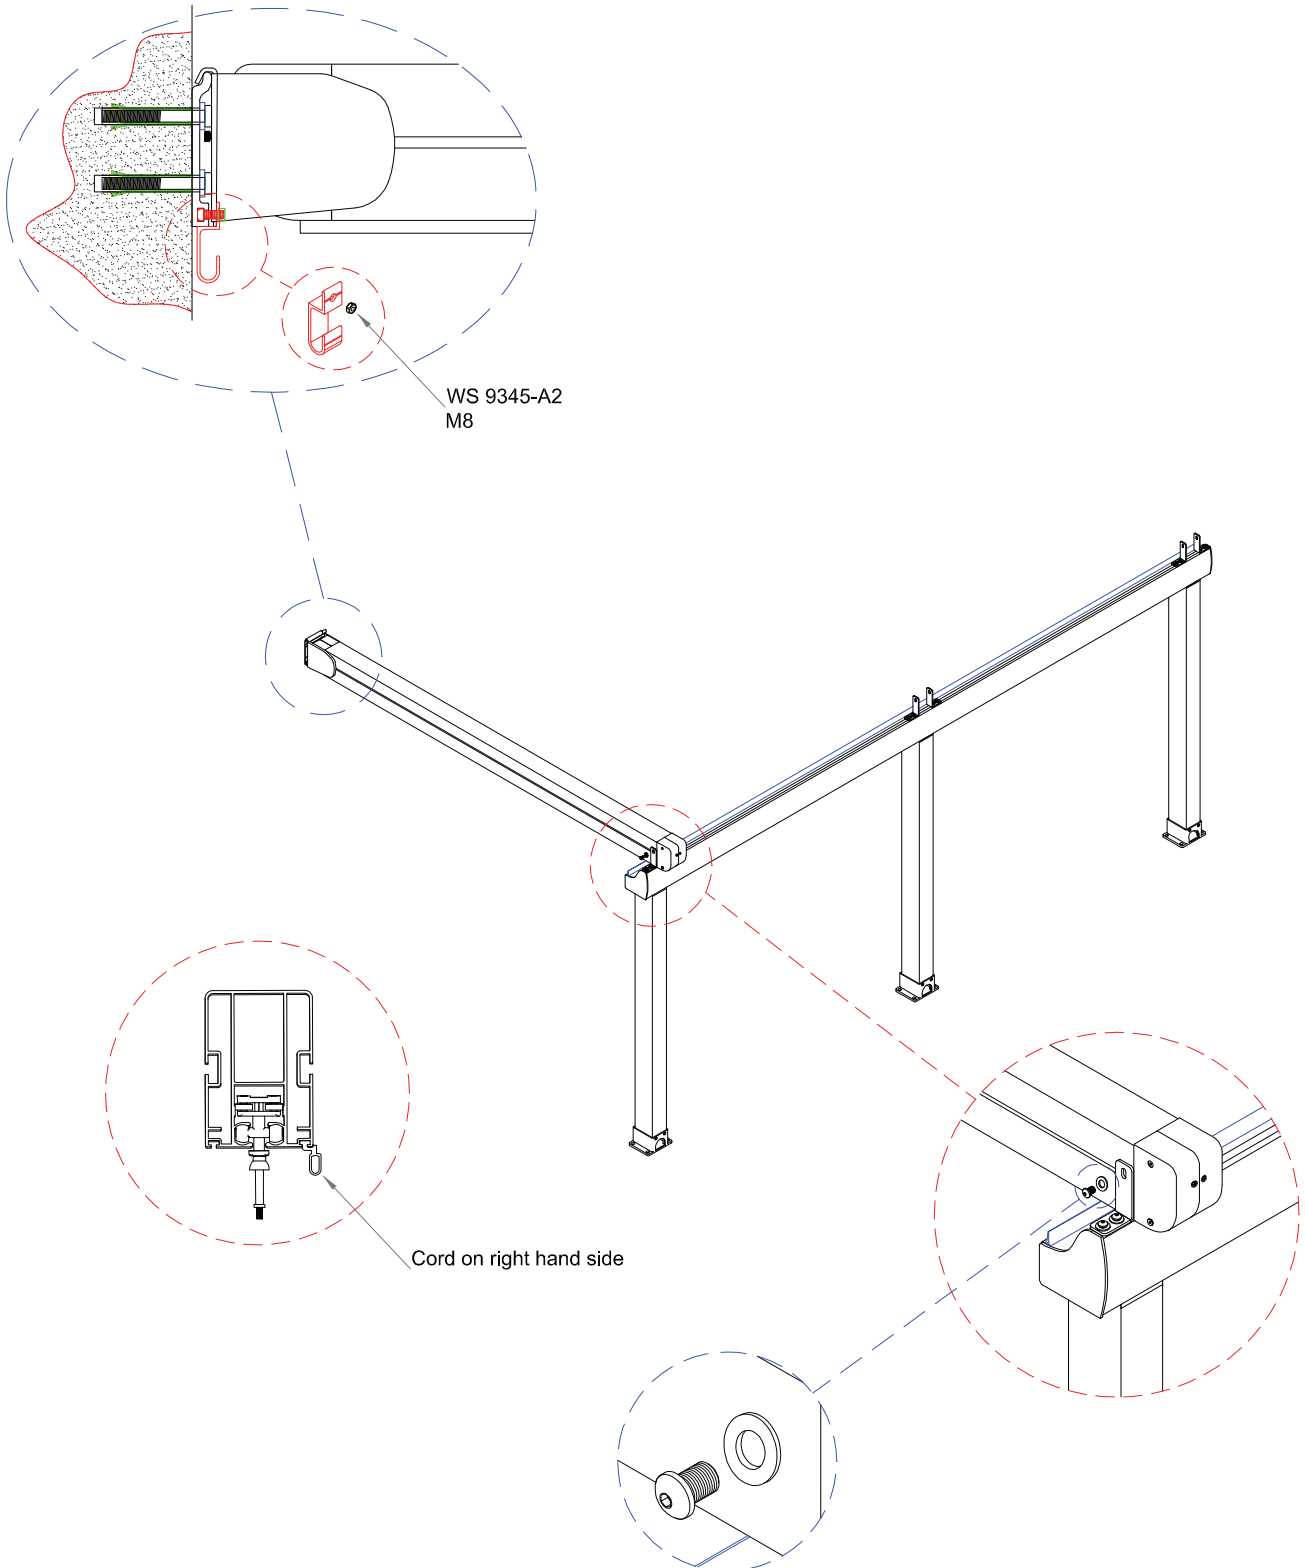

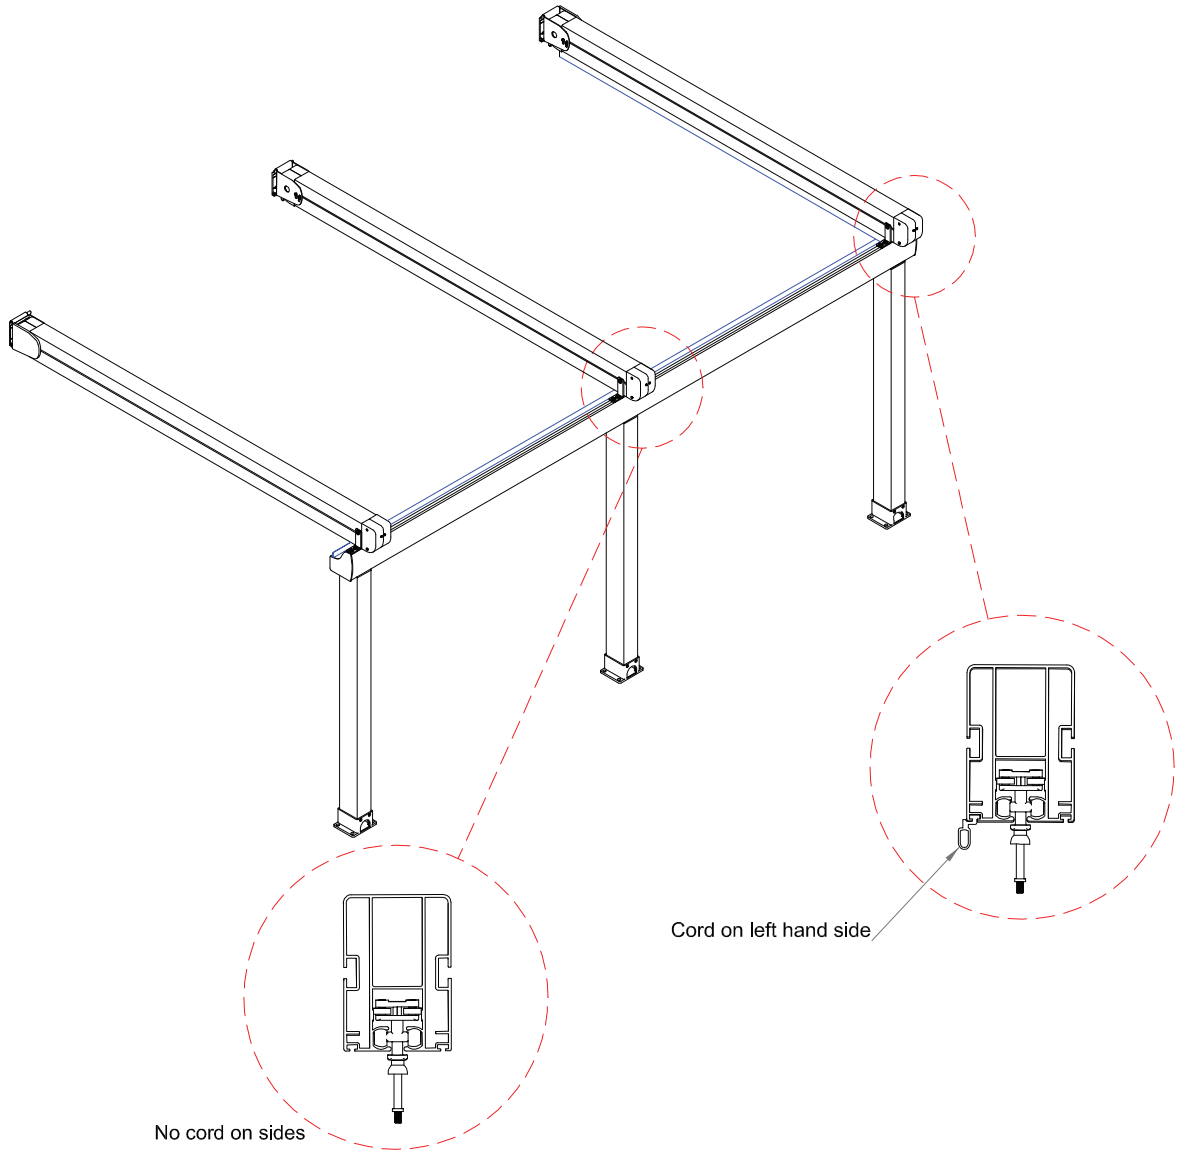


STEP IV

Installation of motorbox and support profiles

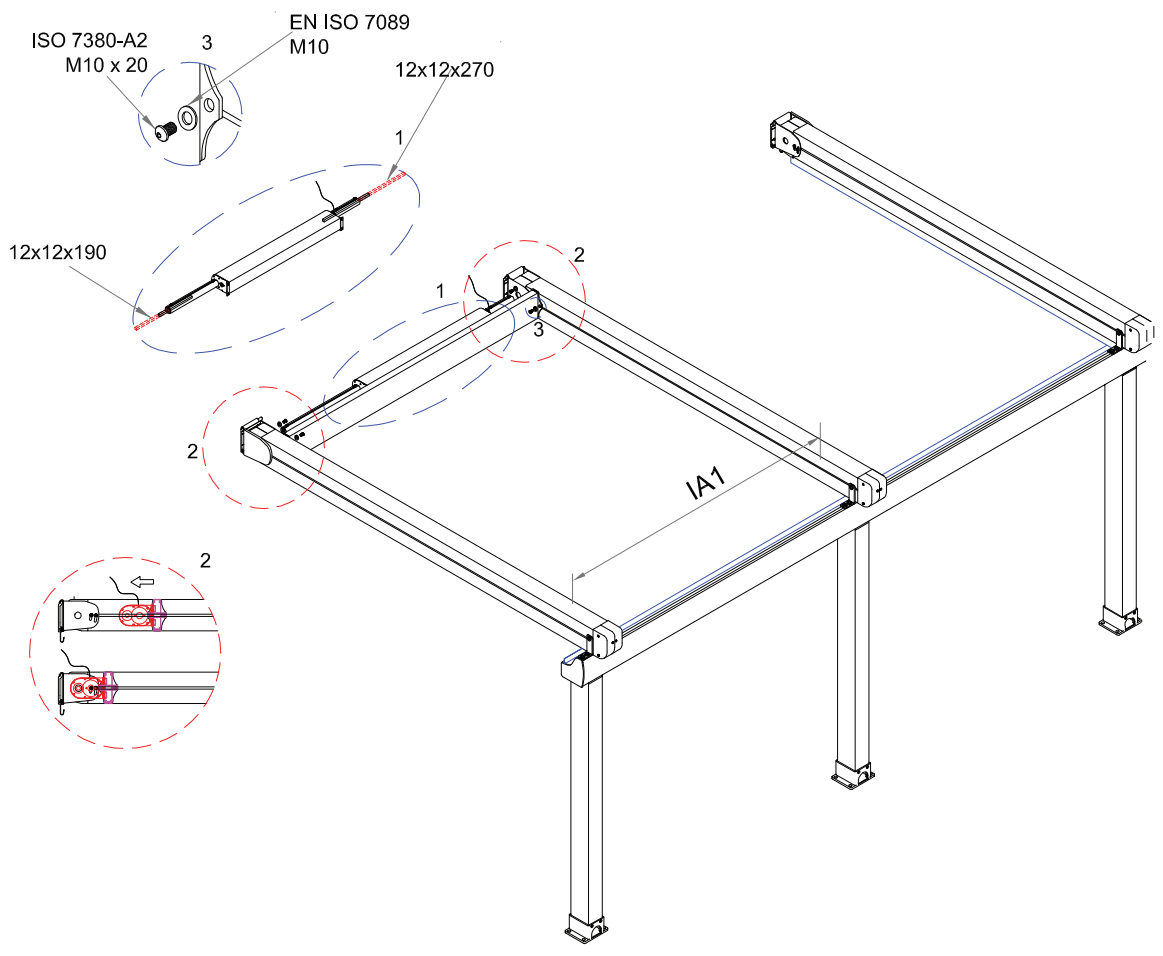


STEP V

Setting the rectangularity

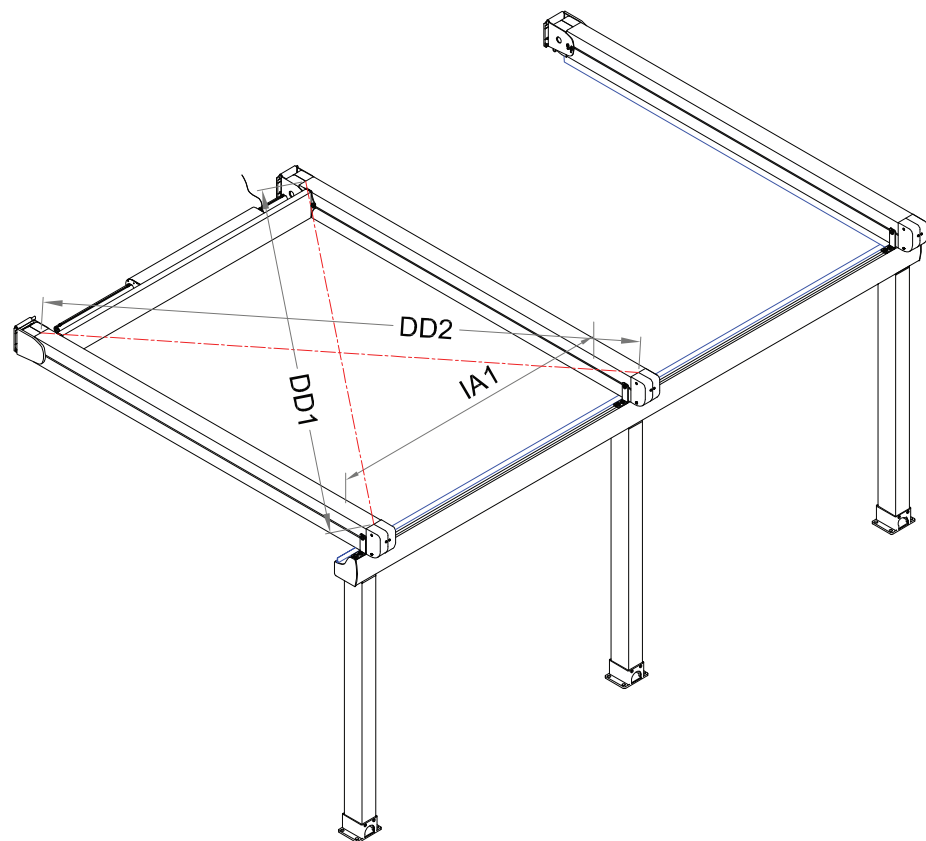


Possibility1


DD1=DD2 ⇒ OK

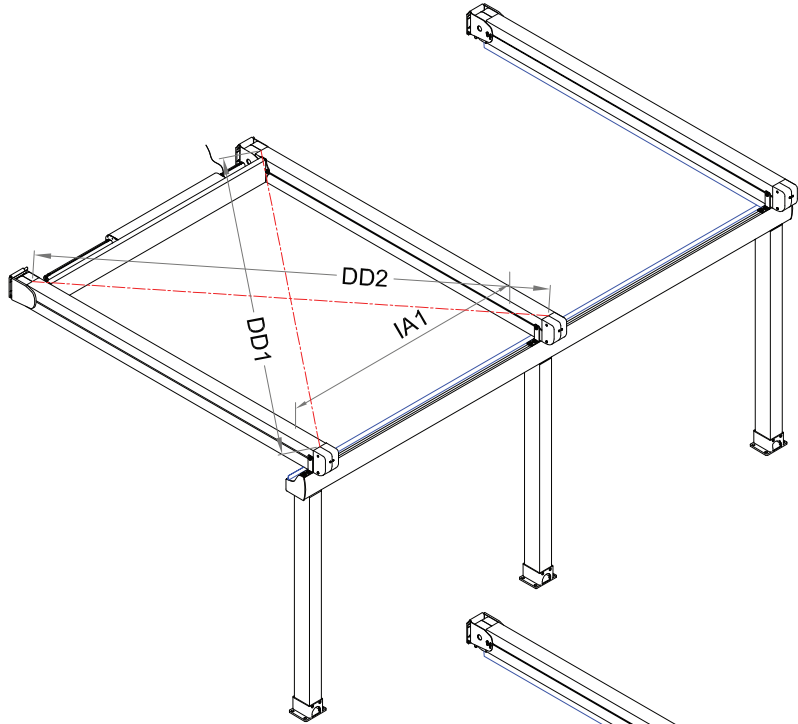Possibility1

DD1 > DD2 ⇒ Move front side to right hand side until DD1=DD2


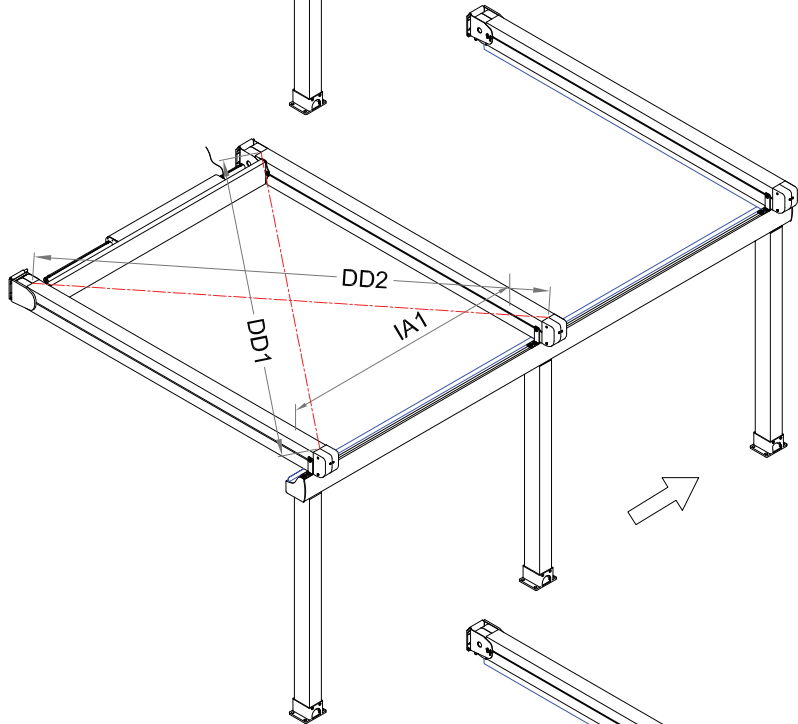
Possibility1

DD1 < DD2 ⇒ Move front side to left hand side until DD1=DD2

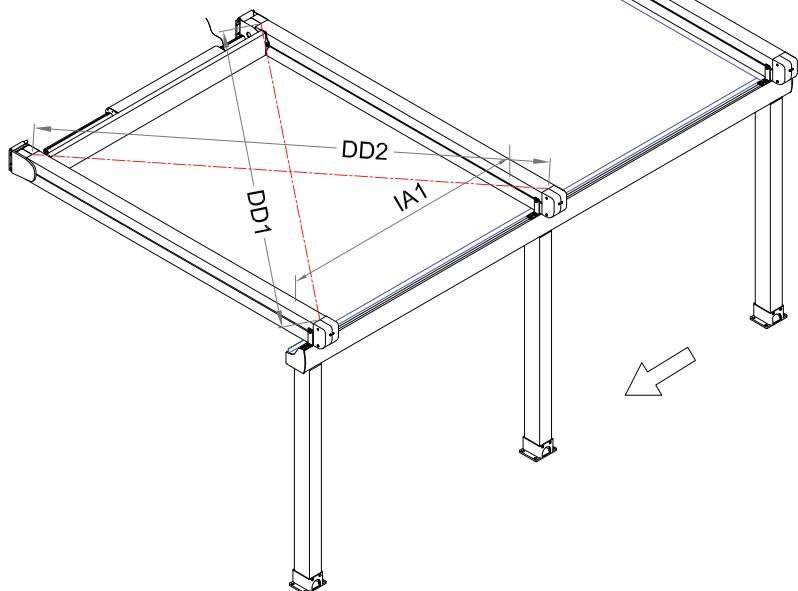





STEP VI

Installation of top cover support profiles

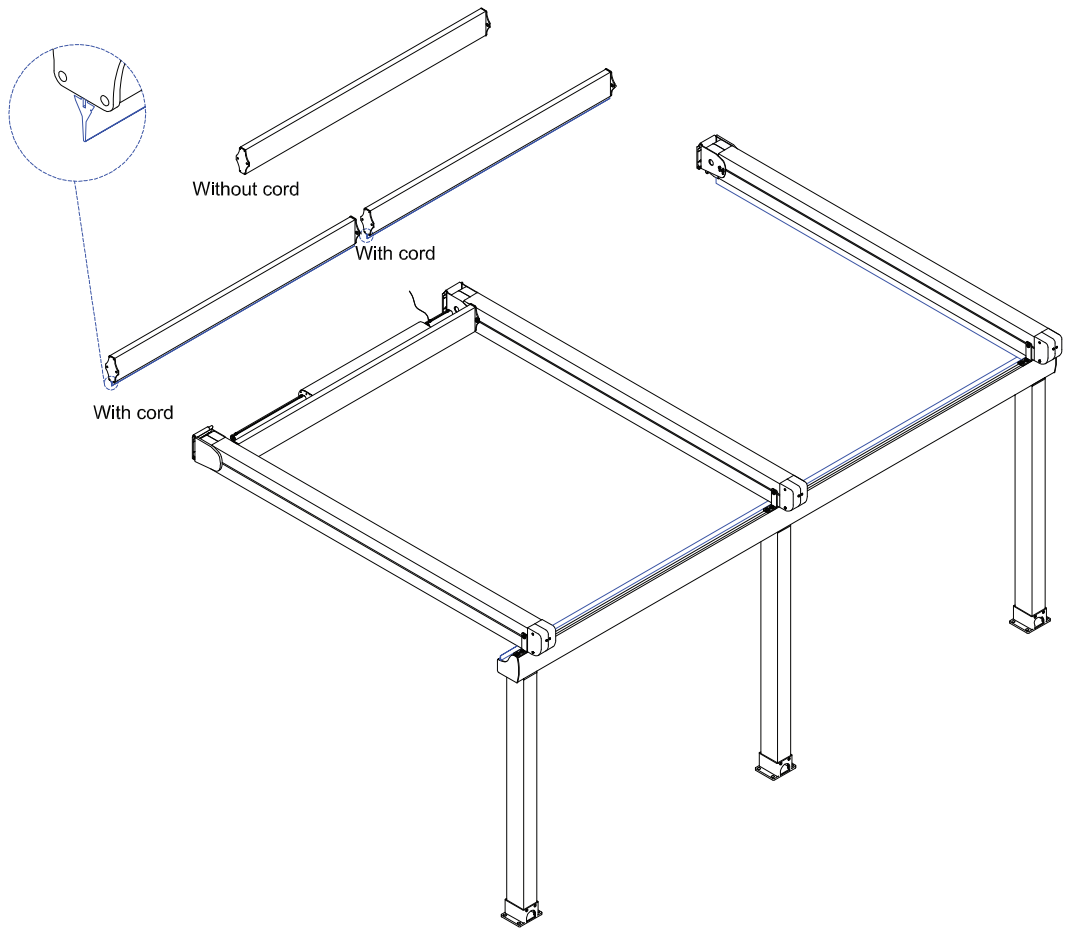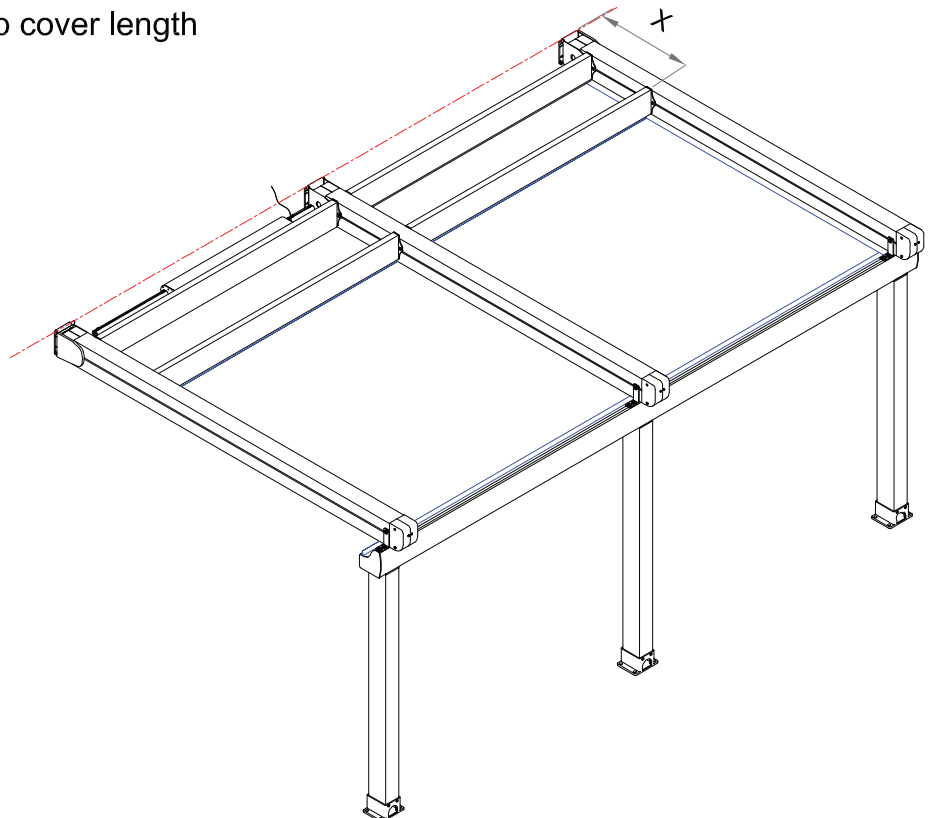
 $X =$ Top cover length

STEP VII

Installation of square pins
and transmission bar

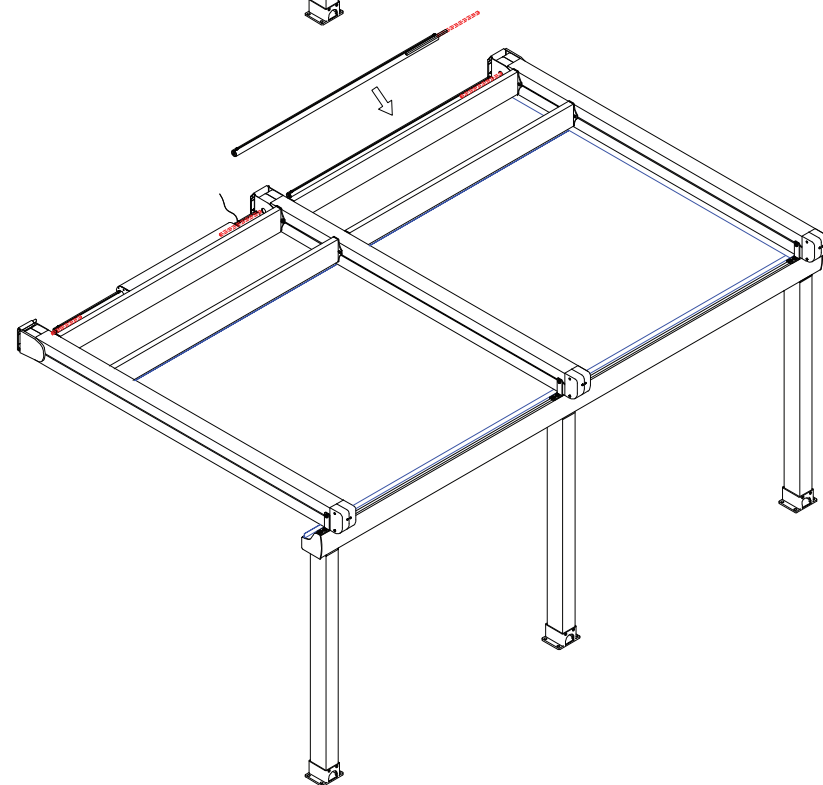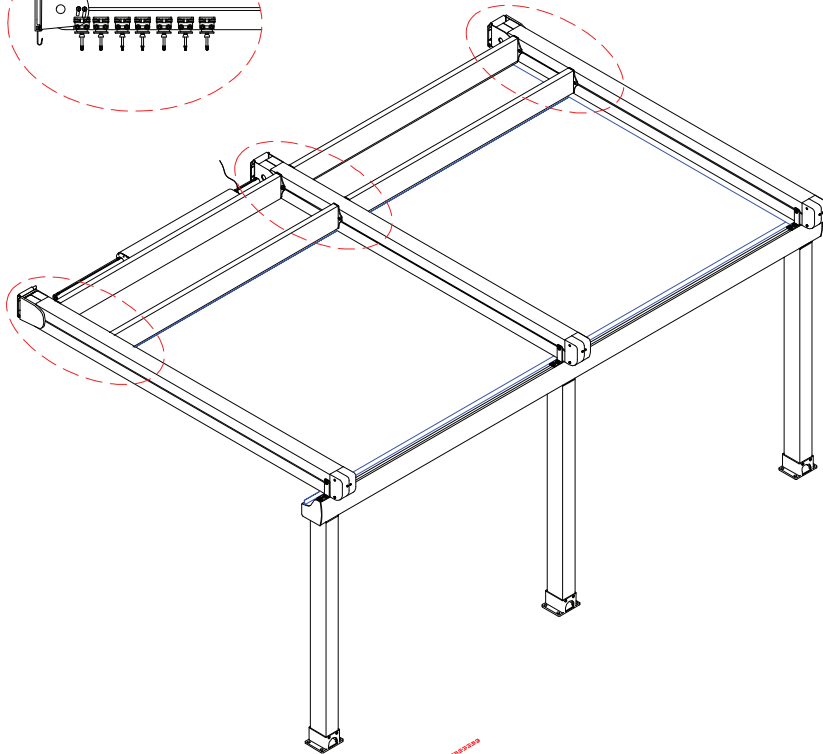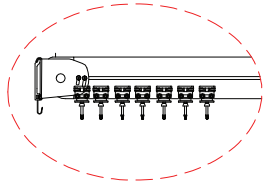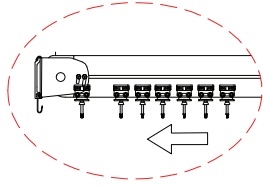


Drive the square pins to the directions mentioned below on details A,B,C.

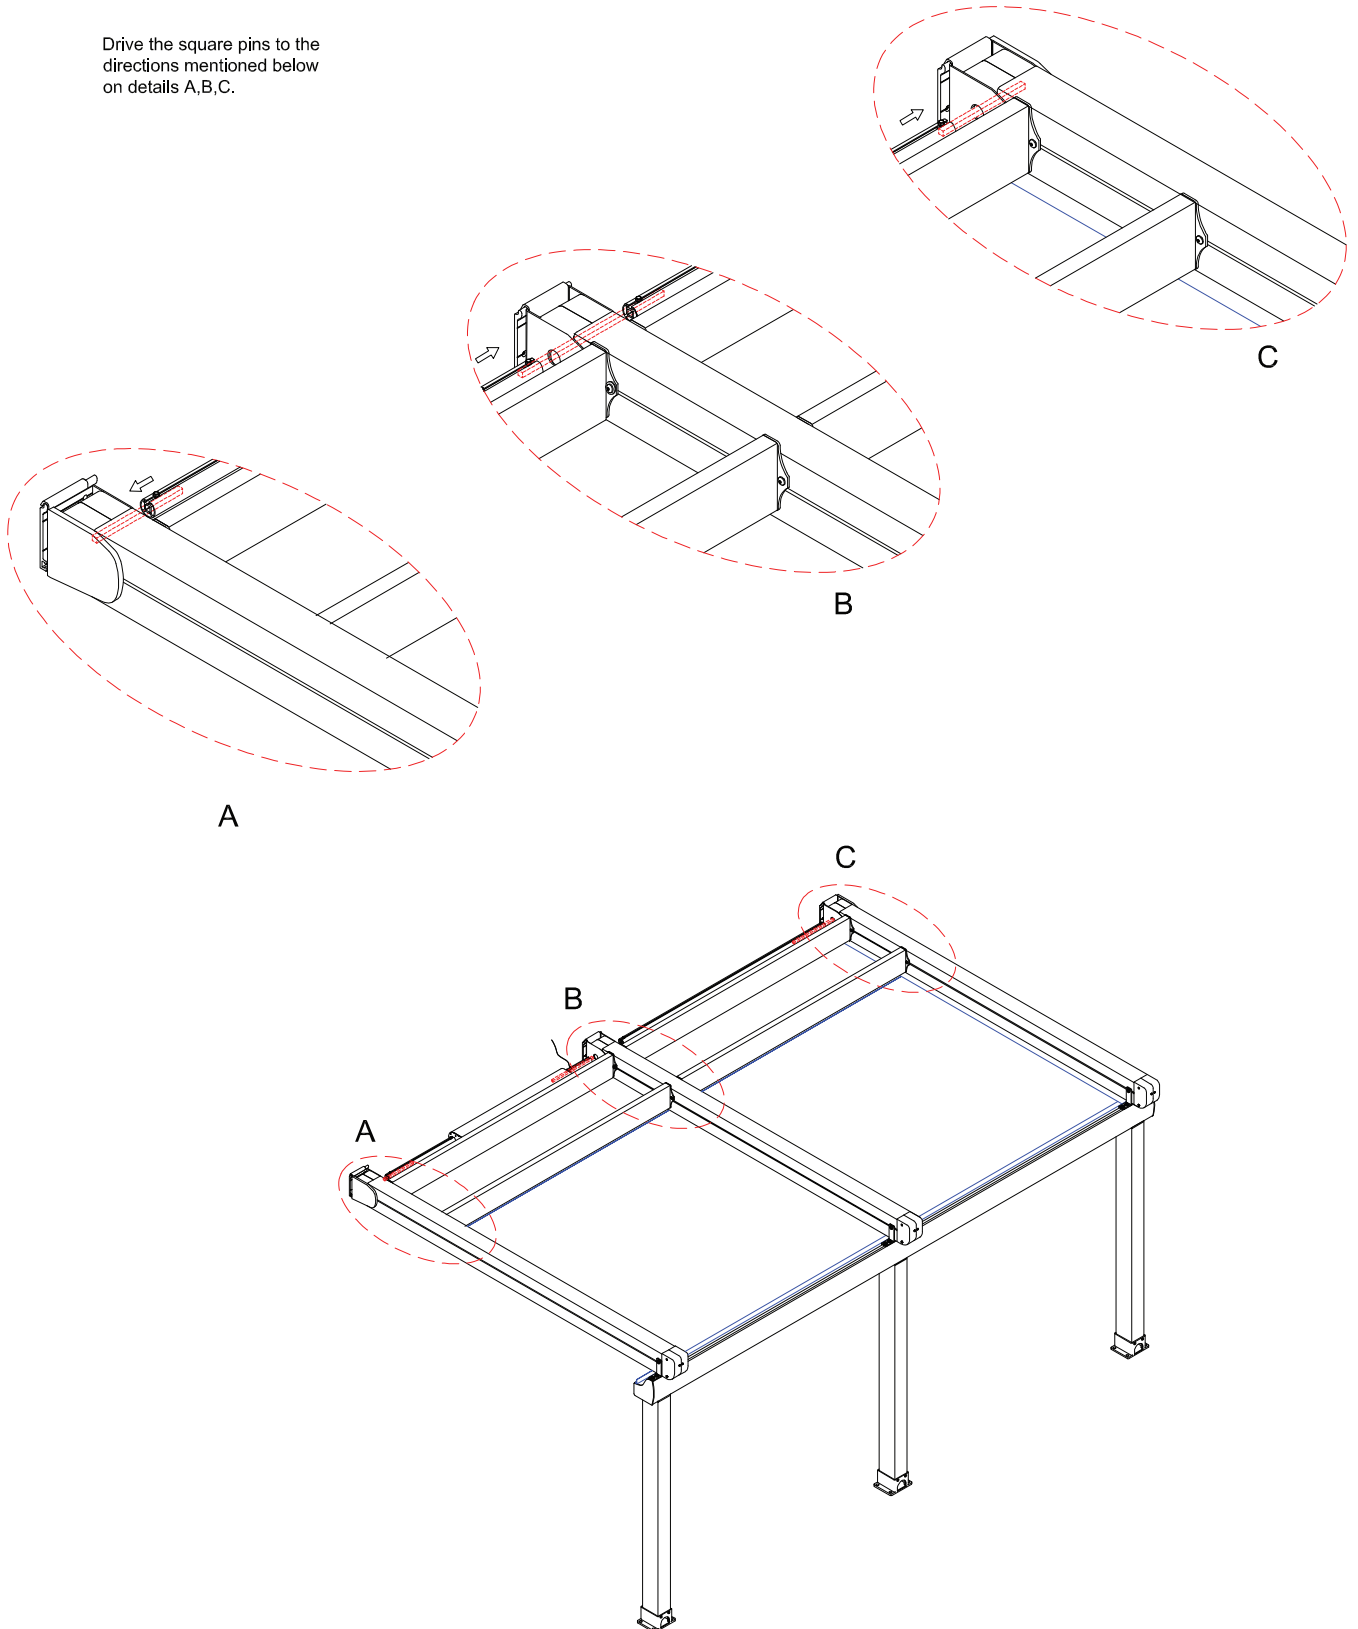


STEP VIII

Installation of fabric


Take care to match the fabric front right position (which writes on the package of fabric) and structure front right position to install the fabric on the system and start the installation from the front sliders.

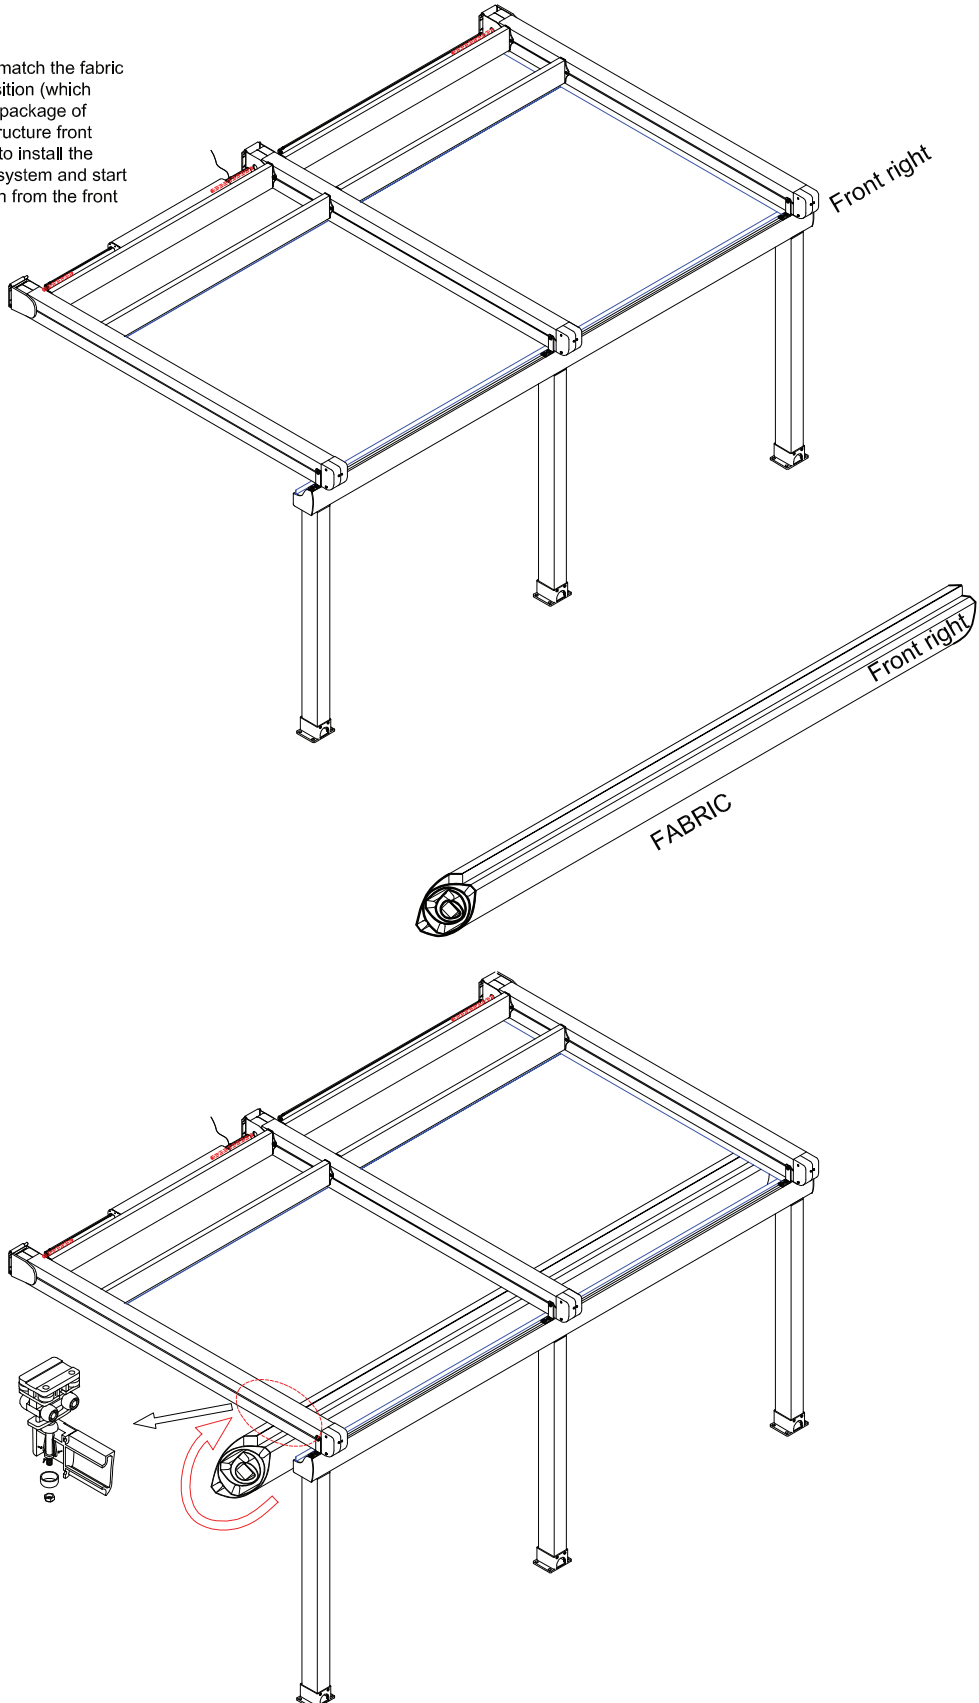

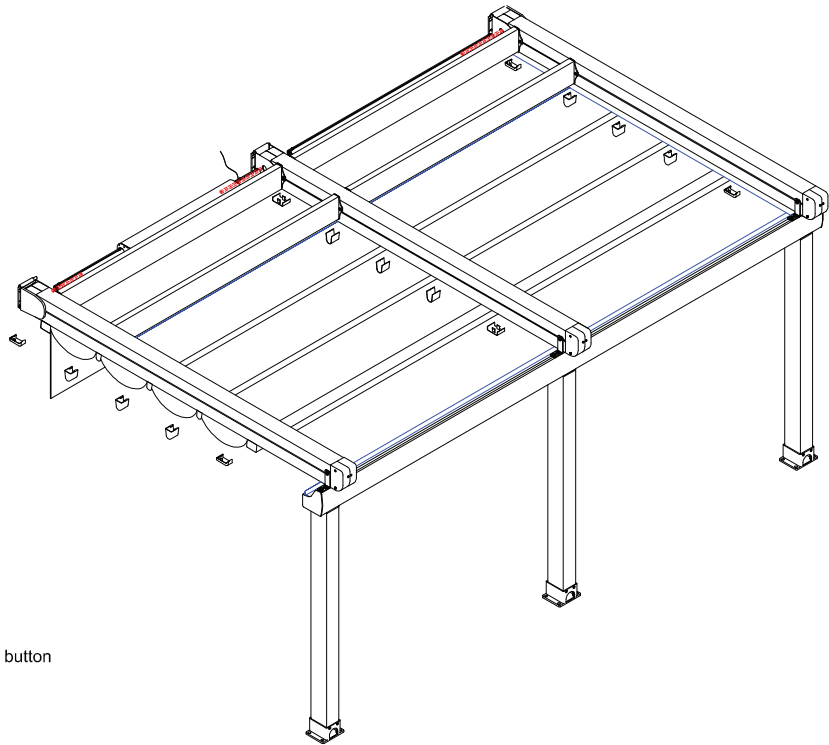

STEP IX

Programming RTS Somfy motor

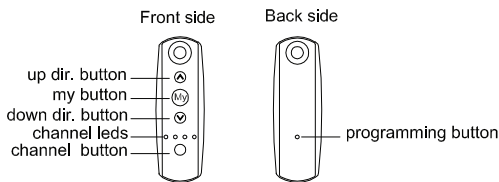

Step1:
Connect the motorbox to 220 AC power
-Blue : Notr
-Brown:Phase
-Green-Yellow:Ground

Step2:



Check the channel for programming motor.Pres the channel button to select the channel 1 , make the channel 1 led light flashing.

Step3:



Press the up and down button at same instance motor will give a click.(this means motor and remote control unit is introduced to each other.

Step4:



Press the up button to check the direction of movement.If the fabric moves to up direction go on to step 6, if no go on to step 5.

Step5:



Press the My button until the motorbox gives a click.The direction is reversed

Step6:



Move the fabric to back limit position that the fabric is totally gathered under the front top cover support profile.

Step7:



Press the My buttton & Down Dir. Button at the same instance for once the fabric will start to move down direction.And stop the movement with My button appr. 5 cm before the front en limit.

Step8:



Press the down dir. button will small time intervals until the fabric is fully tensioned.

Step9:



Press the My buttton & Up Dir. Button at the same instance for once the fabric will start to move up direction.And will stop itself at back limit position.

Step10:




Stay pressing the My buttton until the motor will give click movement.

Step11:



Press the programming button once. The programming is finished.

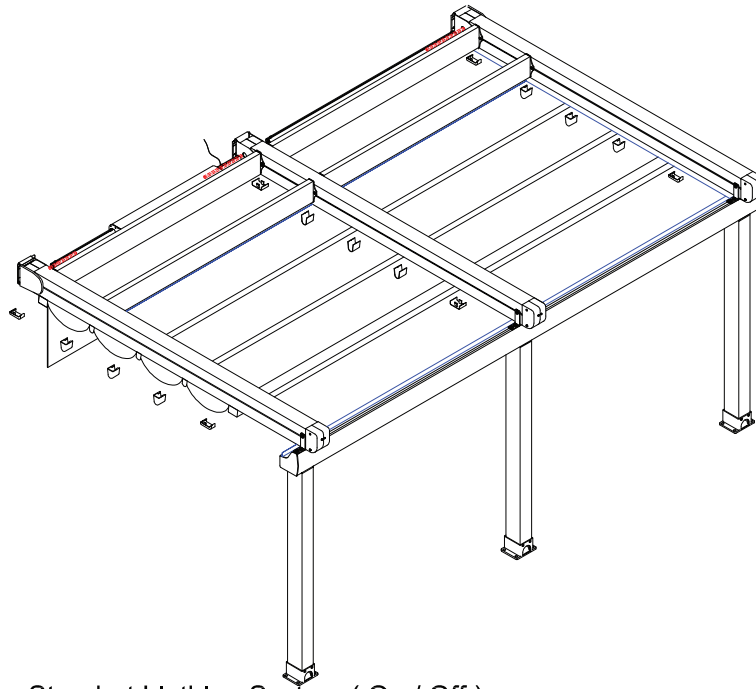


STEP X
Programming the Standart Ligthing System (On / Off)


⚠ FATAL ERROR FOR LEDS:DO NOT CONNECT LEDS DIRECTLY WITHOUT LPC DRIVERS.

Step1:

CENTRALIS LIGHT RECEIVER RTS

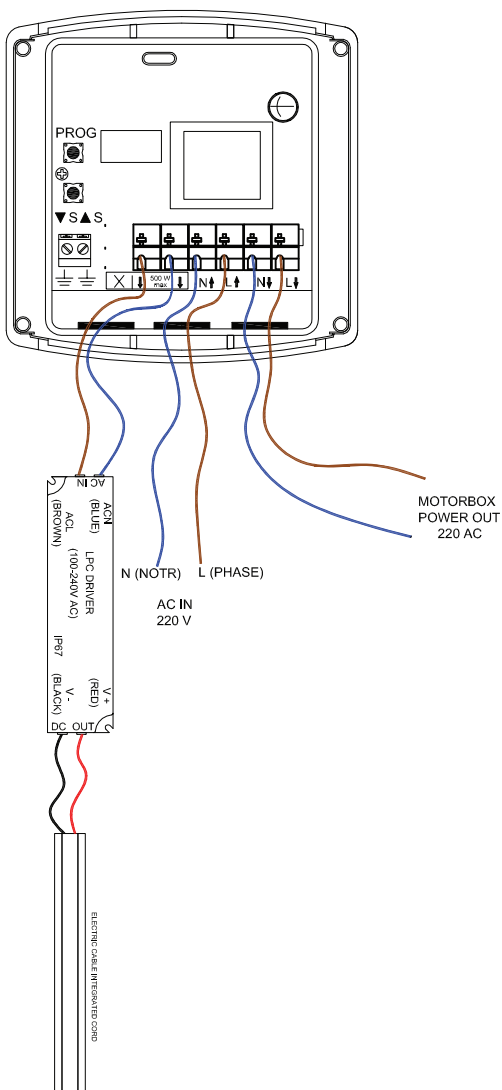

 Step2:



Check the channel for programming lights.Pres the channel button to select the channel 2 , make the channel 2 led light flashing.

Step3:


Press once to PROG. button which is inside the centralis light receiver unit.

Step4:





Press the programming button once. The programming is finished.



STEP XI
Installation of top cover

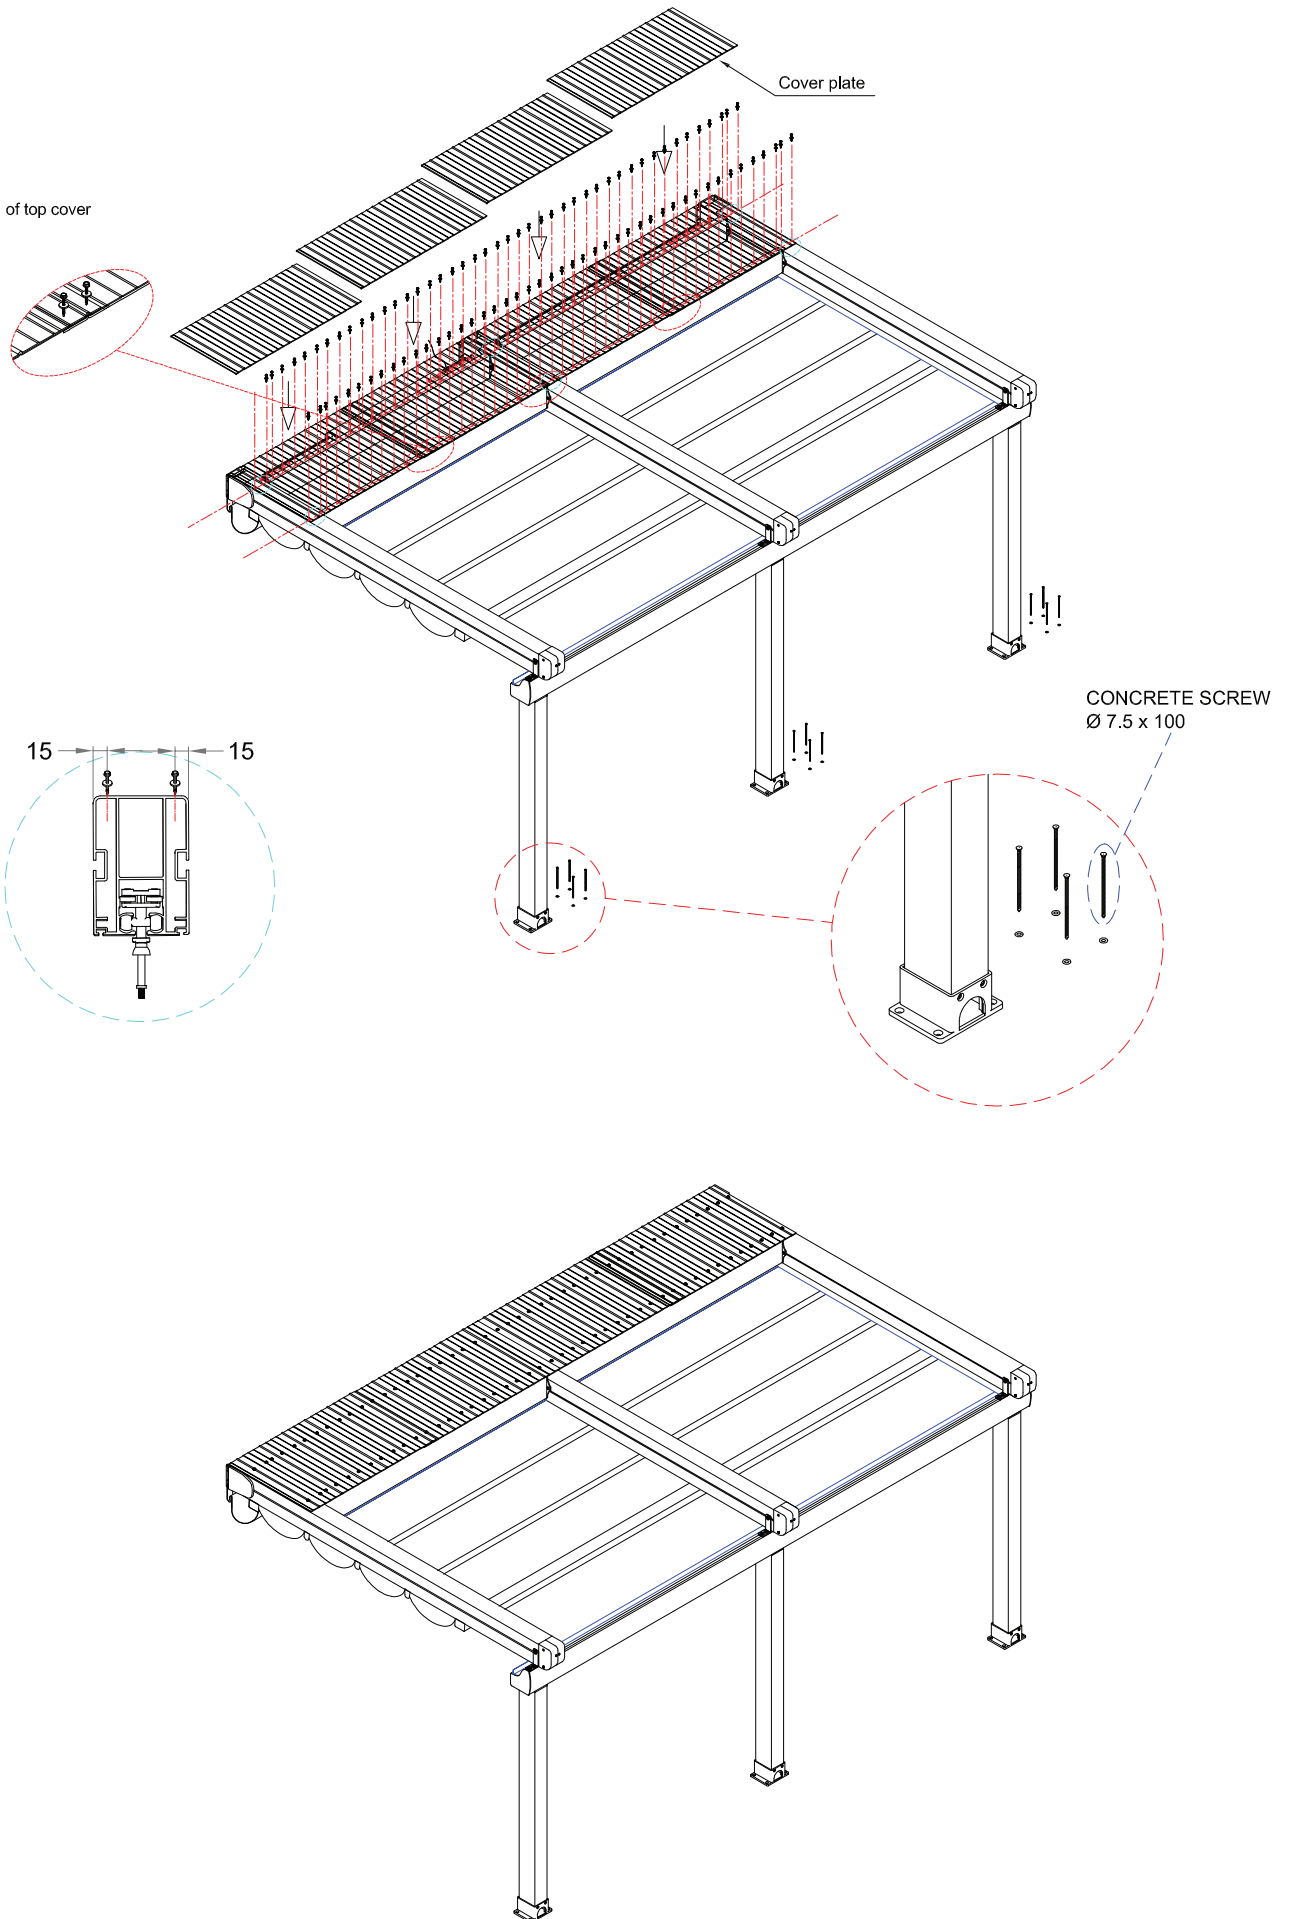


SIDE RAFTER BAR INSTALLATION (OPTIONAL)

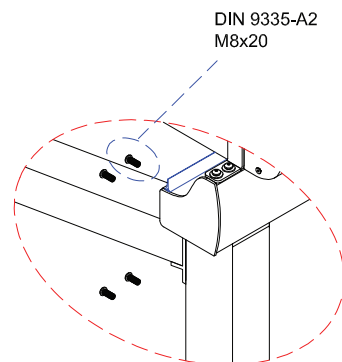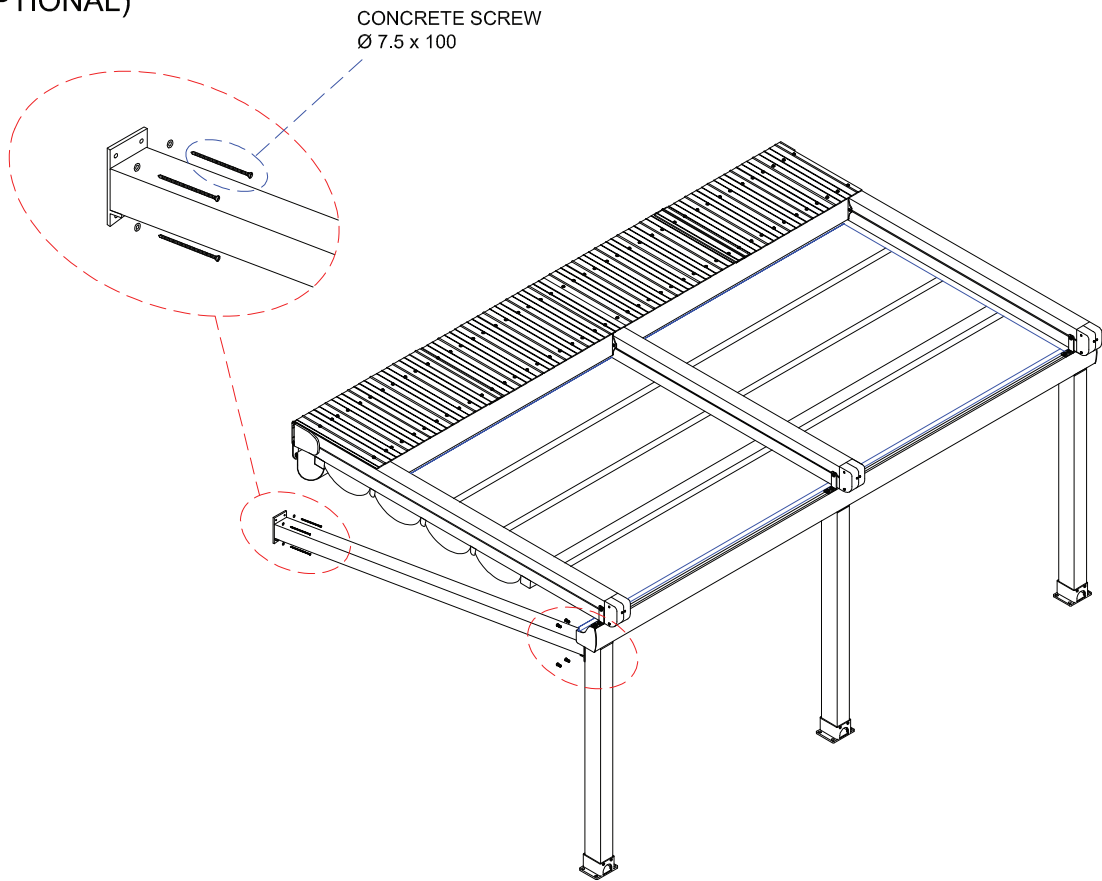

AEROFIL LOUVRE
INSTALLATION
(OPTIONAL)

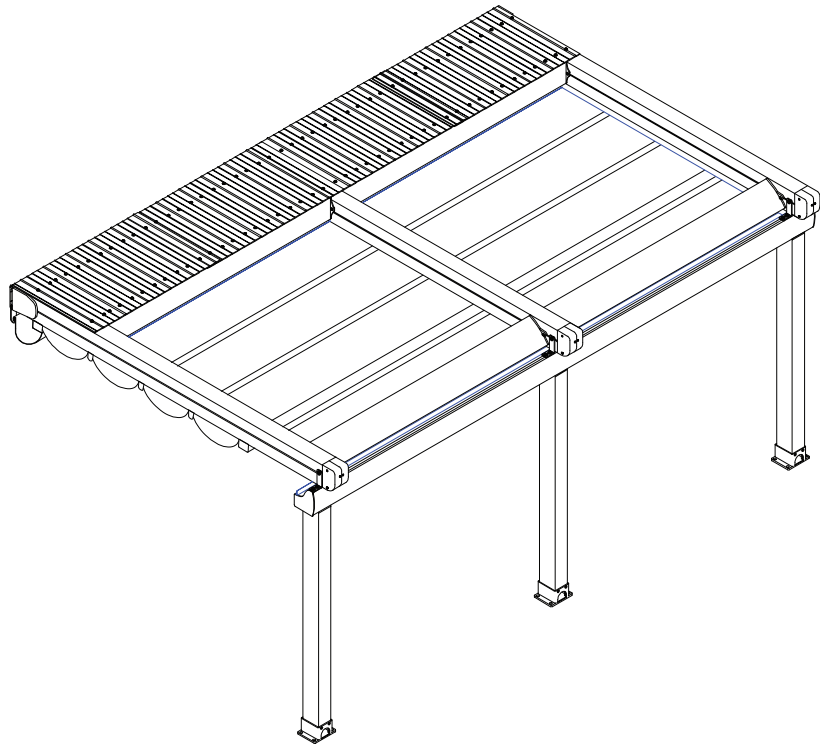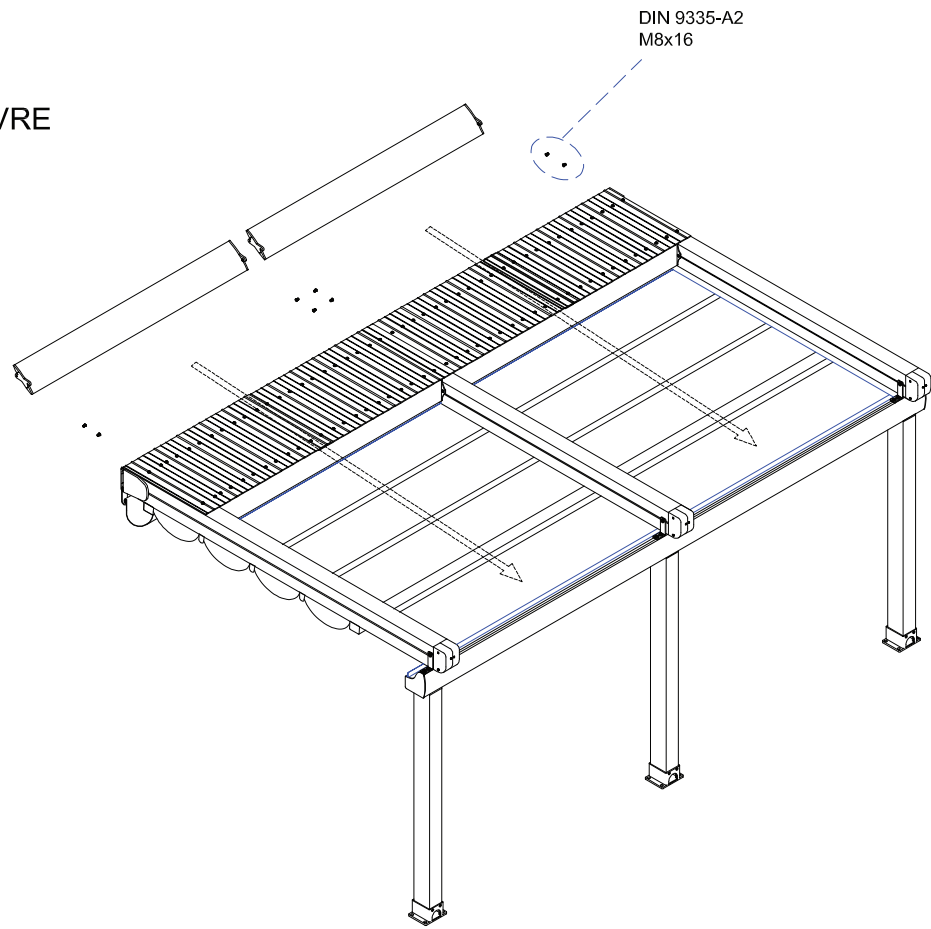

DIMMER KIT INSTALLATTION (OPTIONAL)

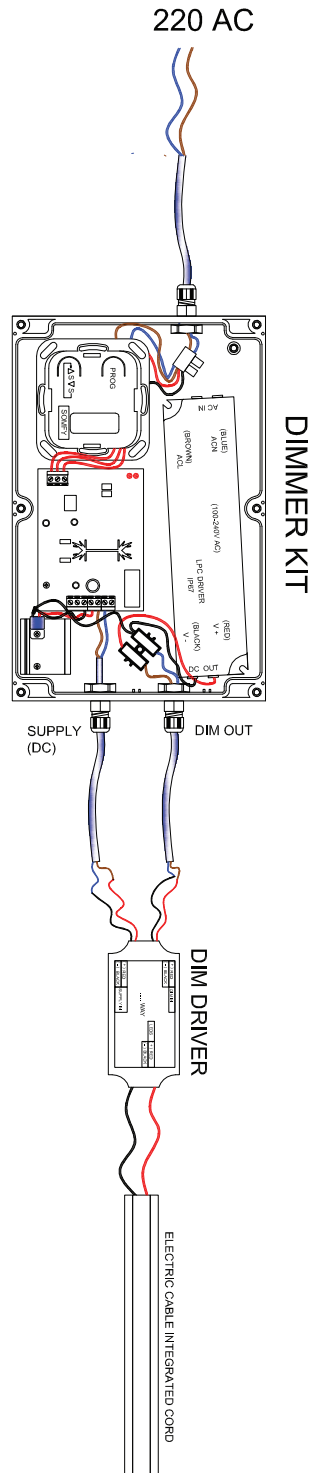


Programming Dimmer Kit

Step1:

The Dimmer Kit is already Programmed on Channel II on Remote Control if no;

 Step2:



Check the channel for programming lights.Pres the channel button to select the channel 2 , make the channel 2 led light flashing.

Step3:


Press once to PROG. button which is inside the dimmer kit.

Step4:



Press the programming button once. The programming is finished.

Double Motor Connection & Programming (Optional)

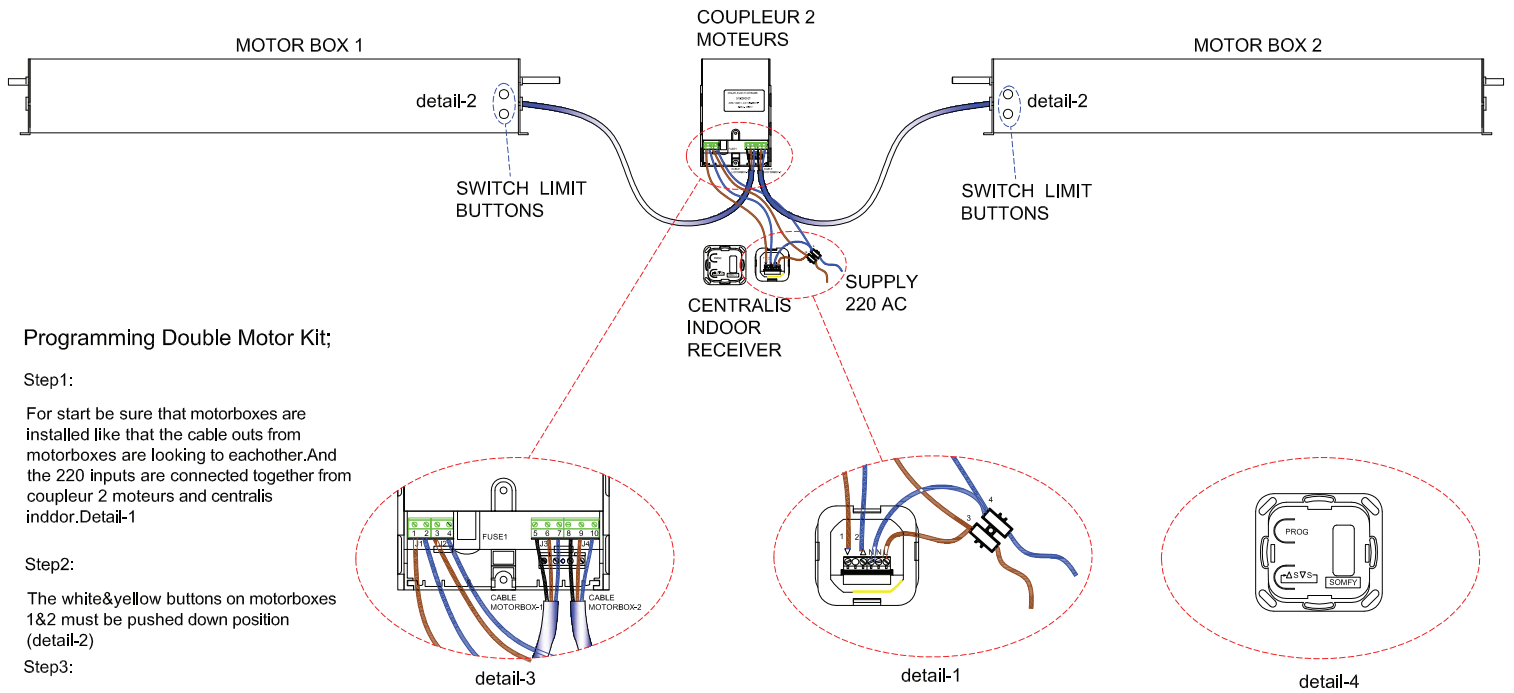

Programming Double Motor Kit;

Step1:

For start be sure that motorboxes are installed like that the cable outs from motorboxes are looking to eachother.And the 220 inputs are connected together from coupleur 2 moteurs and centralis indoor.Detail-1

Step2:

The white&yellow buttons on motorboxes 1&2 must be pushed down position (detail-2)

Step3:

All programming will be done from motorbox 1 (is the motorbox which is connected to slots 5-6-7) (detail-3)

Step4:

From centralis indoor receiver press "S" button (detail-4) motor will start moving the system and when the system is reached to limit point push up the yellow or white button from motorbox1.

Step5:

Push the other "S" for the other side limit and when the system reaches the limit,bush up the other button yellow or white from motorbox1.

Step6:

At the end to match the remote control with centralis indoor , press the prog button on thecentralis indoor receiver and press once on the remote control which is in the back side of the remote control.

Note:To change a limit push down the yellow or white button on motorbox-1 again and move the system to new limit point and push up the button again.